



14986.0

General View of Railing




Fixed Railing



Step1

Assemble the main body of the fixed fence


Swing Gate



Step2

Connect the swing gate with the fixed fence


Swing Gate



Step3

Assemble the reinforced guide-wheel post
Step


Assembly-Slide
Rail-Gate-Bottom Connection



Swing Gate


Step4

Complete the connection between the slide rail and
the gate bottom



Step5


Install and assemble the pulley



Step6

Fit in the pulley for assembly; install the bumper block (insert approx. 40 mm and tighten), then install the roller (align flush with the material opening and tighten) in sequence


Assembly-Reinforced Guide-Wheel Post



Step7

Complete the relevant connection and assembly of the guide-wheel

Single Swing Gate



Step8

Complete the overall assembly and commissioning of the single swing gate

matters need attention:

First level the ground and locate the proper position. Then stretch and fix the thin reference line.

Check the level for each post during installation. Control height, as well as forward-backward and left-right tilt. Measure and verify the dimension of each section for correctness.

Cover with the matched plastic caps after installation. Apply lubricating oil to the motor gear.