


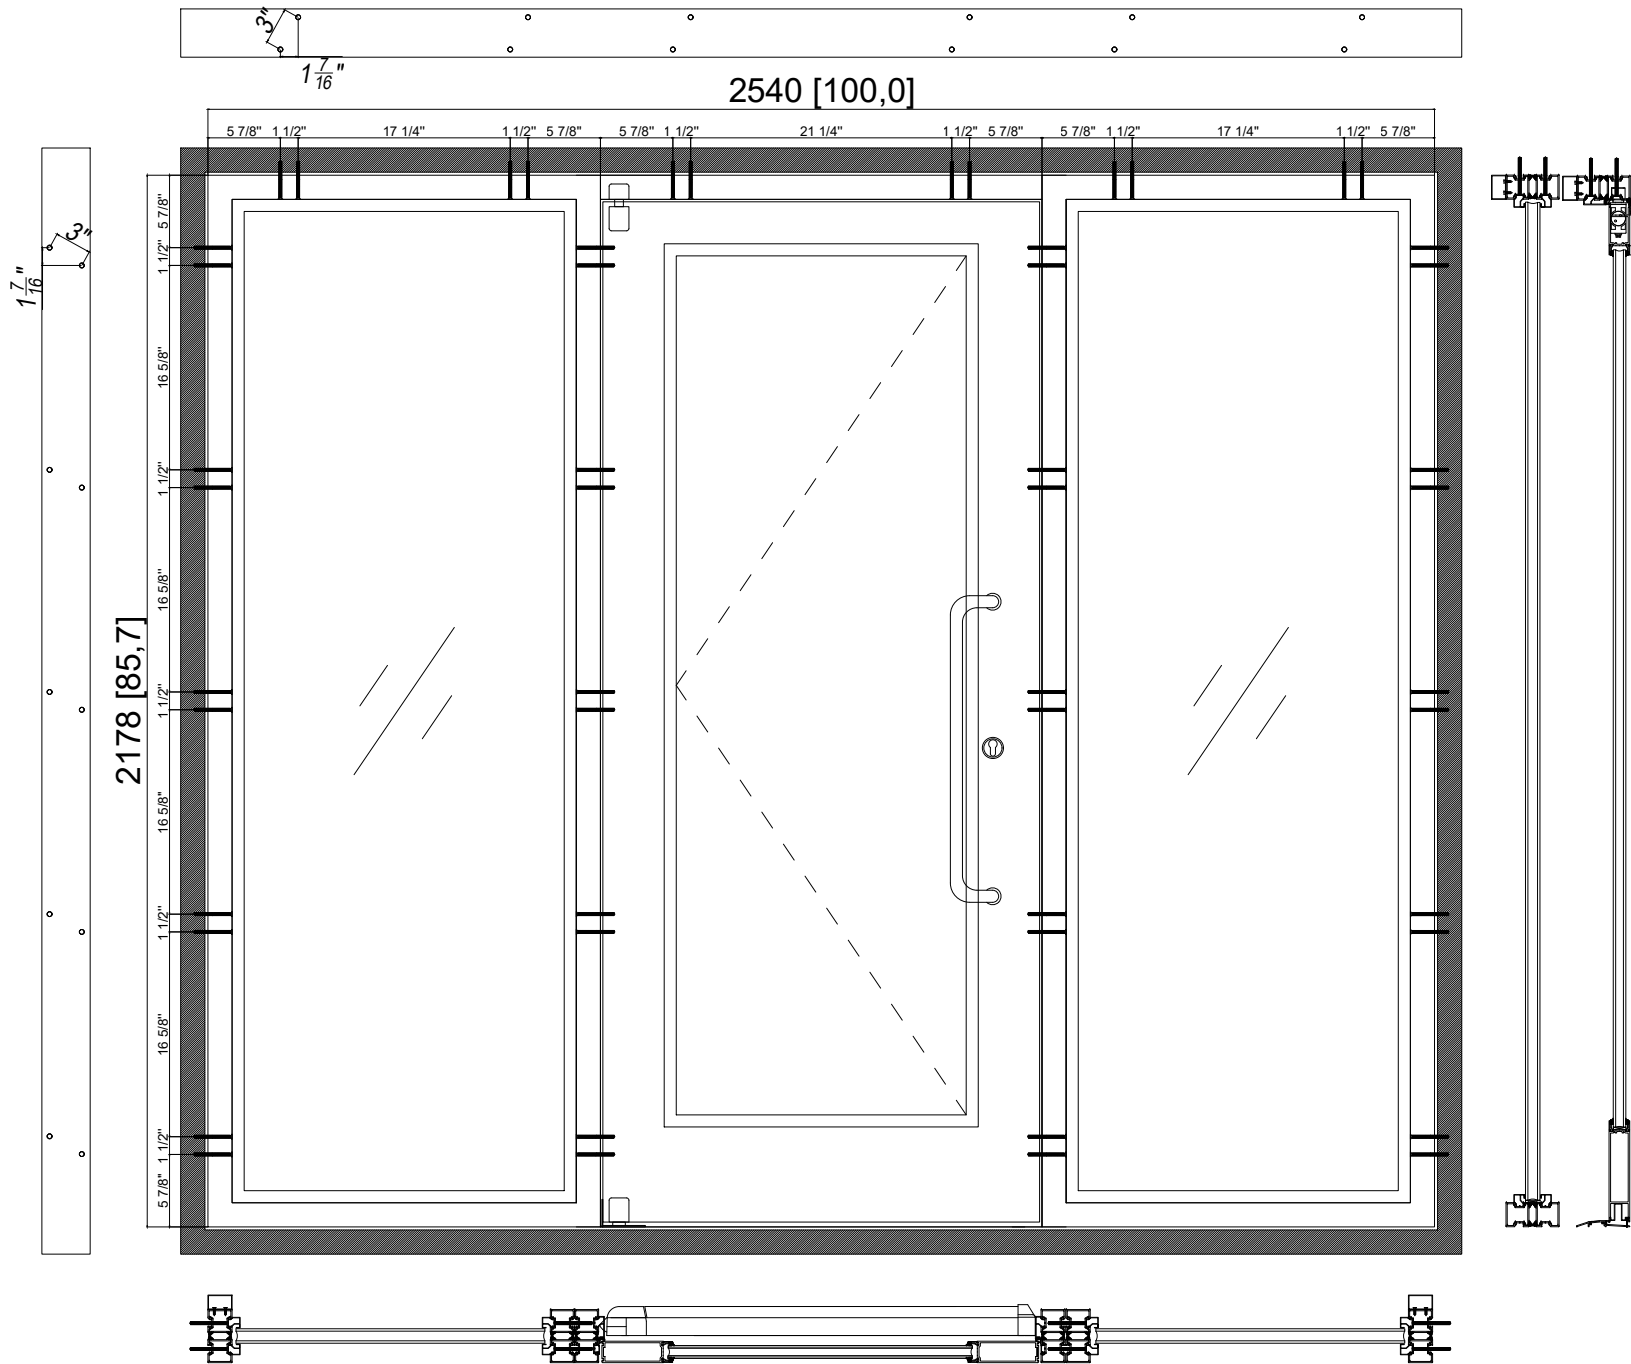

- Precautions:**
- 1.All views are external views, the solid line represents the outward opening, the dashed line represents the inward opening, and the side where the two lines intersect is the hinge installation side.
 - 2.The dimensions on the drawings cannot be used as the basis for construction, and the data from repeated measurements on site should be compared with the annotations in the drawings for construction;
 - 3.On-site construction personnel should check the dimensions shown in the drawings on site, and notify the designer in time if any contradictions are found;
 - 4.This drawing can only be used after being approved by relevant departments;
 - 5.The copyright of this drawing belongs to our company, without written permission, no copying or misappropriation is allowed;
 - 6.In this drawing, except for the elevation marked in meters, all other marked dimensions are in millimeters
 - 7.The final interpretation right of this drawing belongs to our company.

DEORATION DESIGNING:



TAIXING SAINTY INDUTRY CO.,LTD.
ADDRESS: ST Aluminum, Baogou Town Industry ,
Tengzhou City , Zaozhuang 277000, Shandong
Cell: +86 150 5290 5768 (Whatsapp)
www.aluminum-window.com
Email:info@staluminum.com

Customer:

Project:

Drawing For:


STFD


DESIGNED	计军荣	计军荣
CHECKED		
DESIGNED		
DESIGNED		
Drawing No.	AWN2025.7	
Scale	1:1	
Map	A7	
Date		
Stage	Design	
CUSTOMER	2026/06/13	
OWNER		
MARK		

Exterior view




Interior view

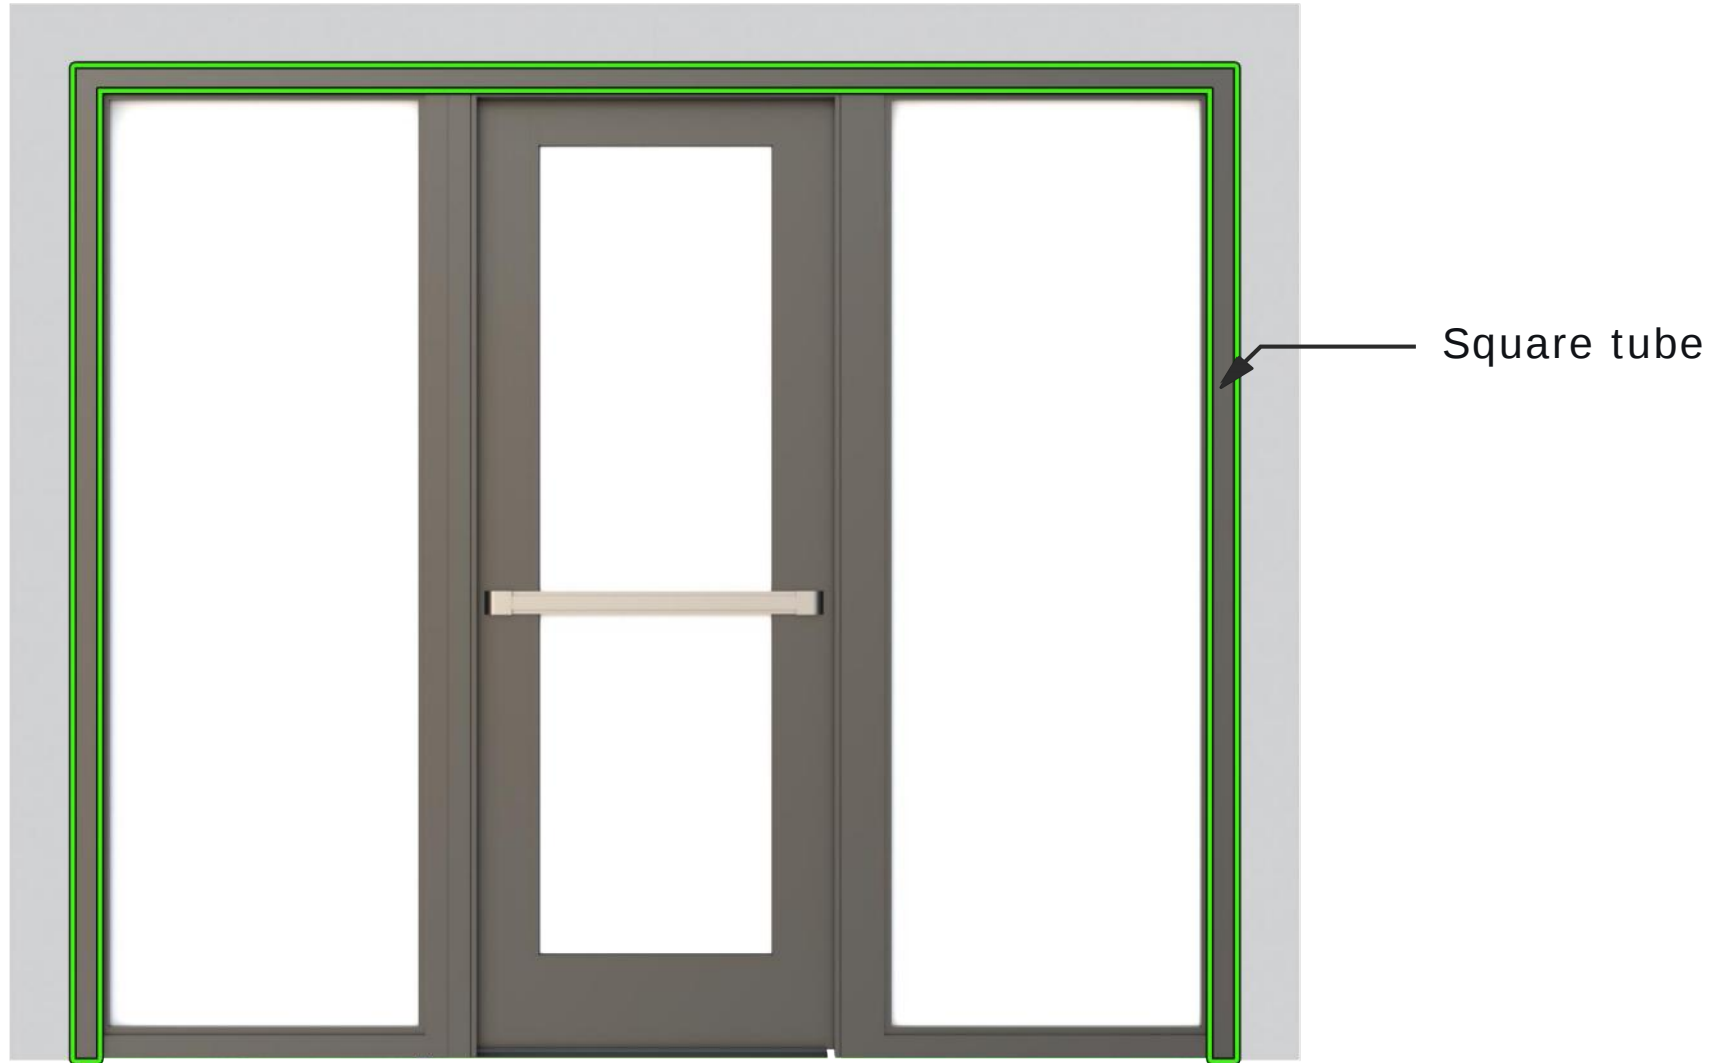


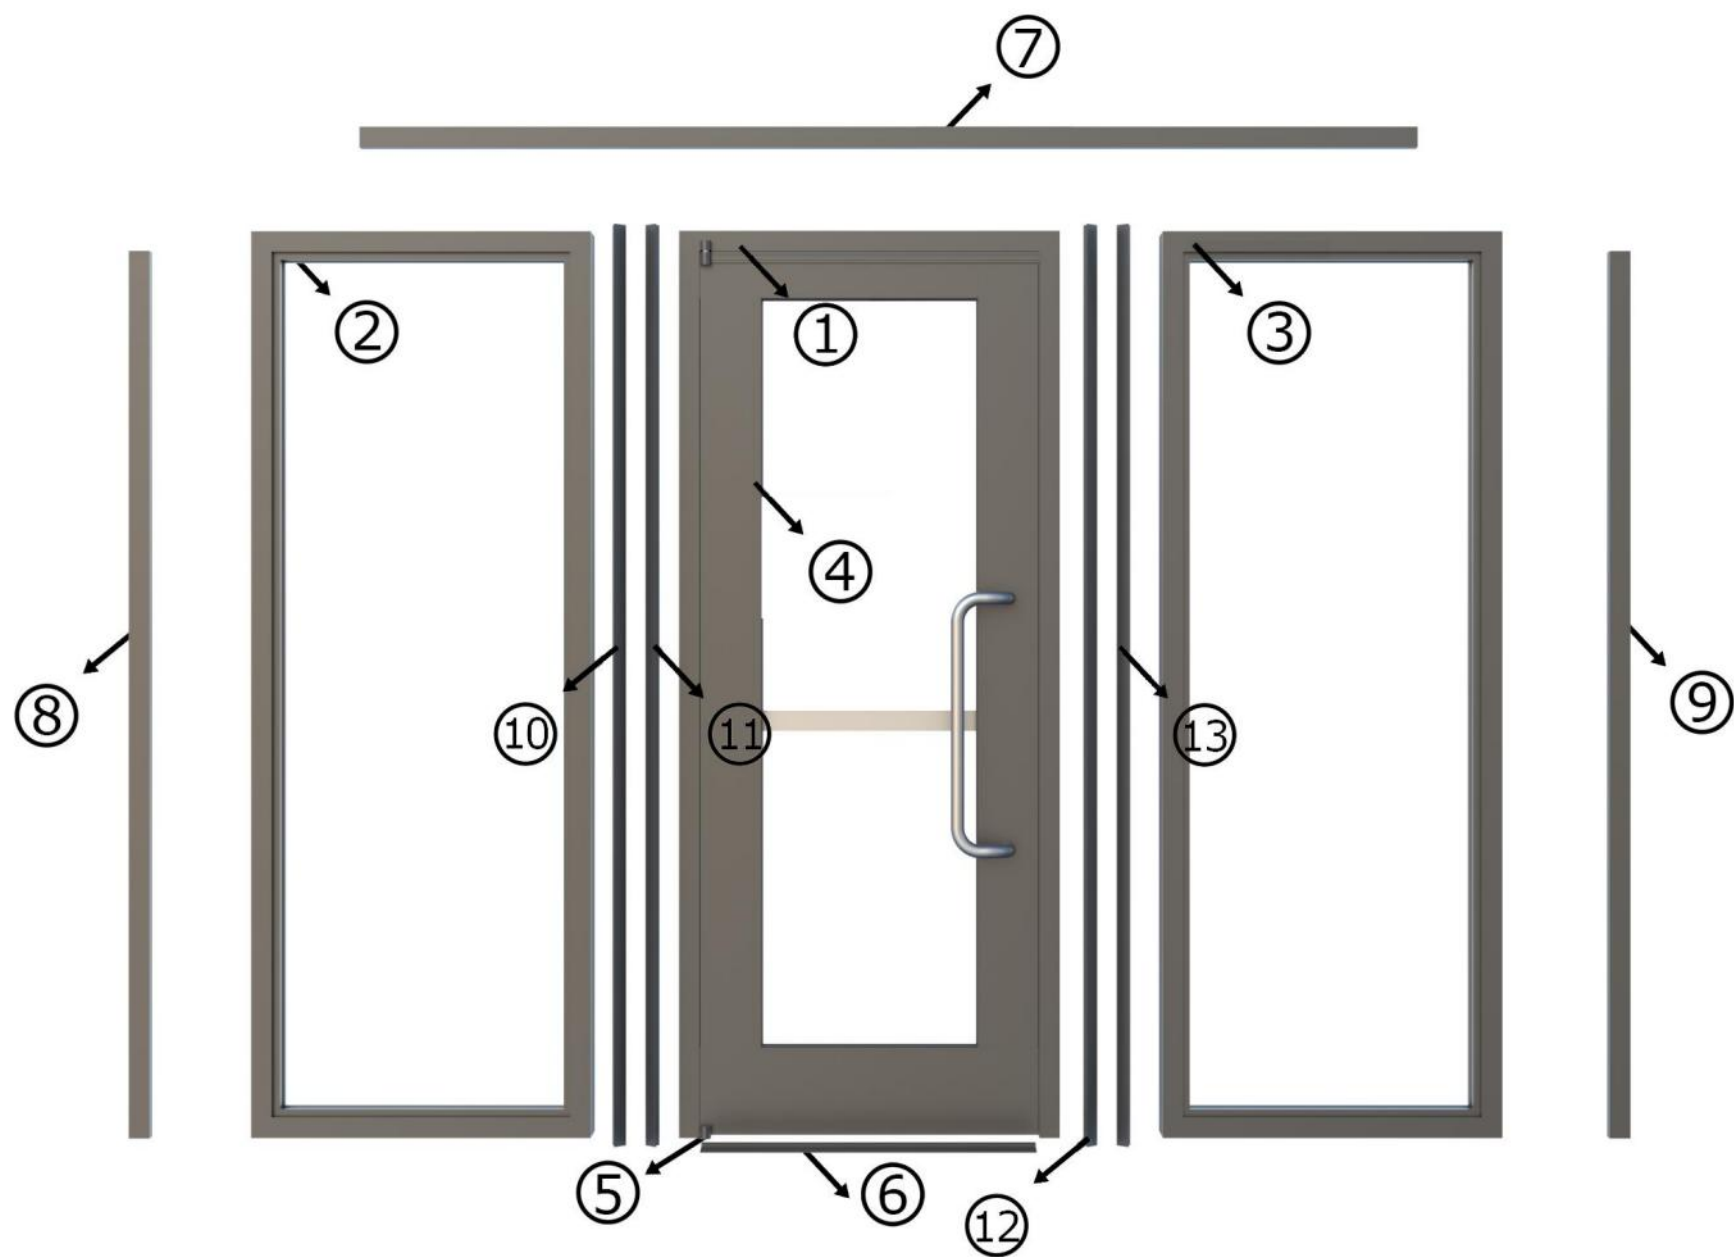


1. According to the dimensions below, position the operating leaf.

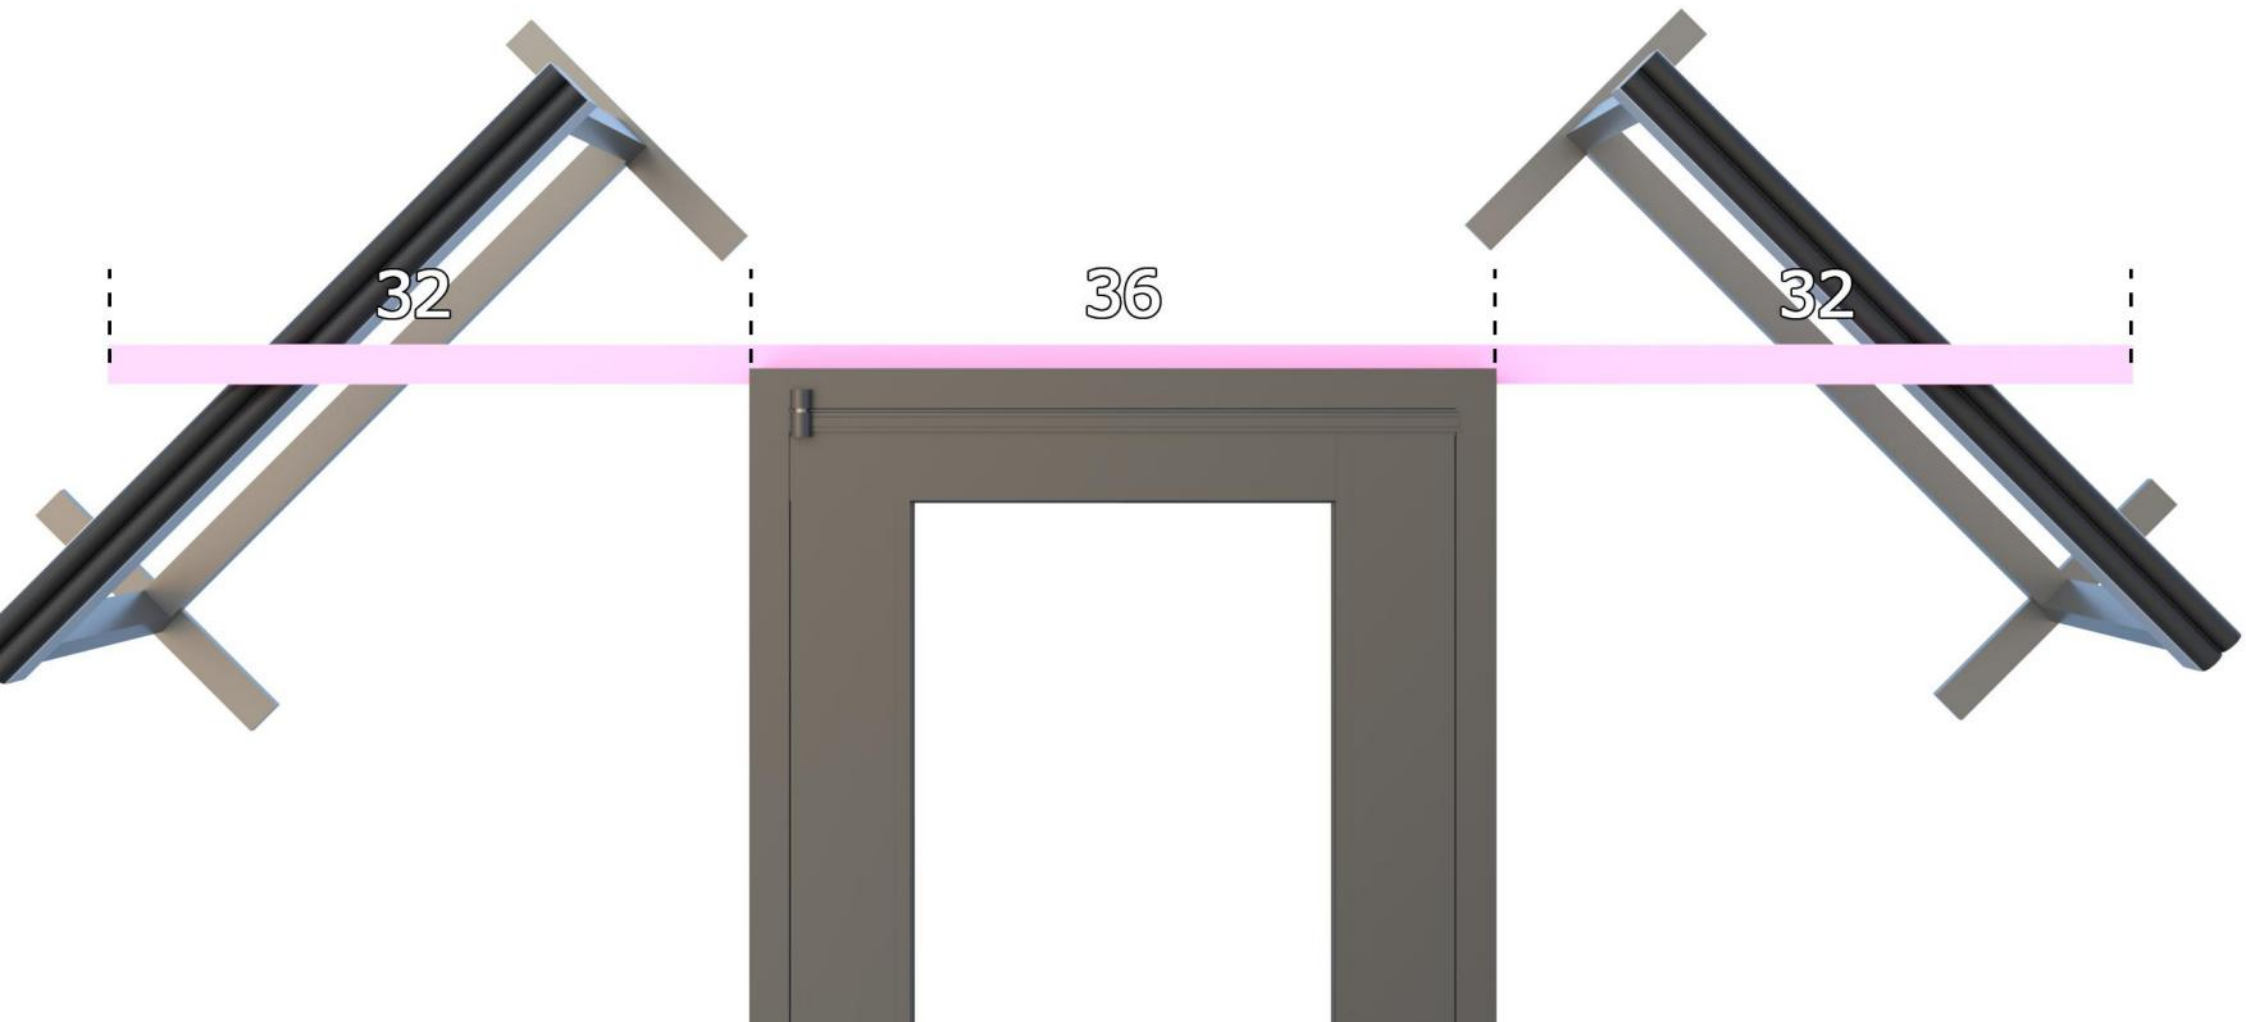


2. Apply silicone sealant to the top interior side of the door frame.

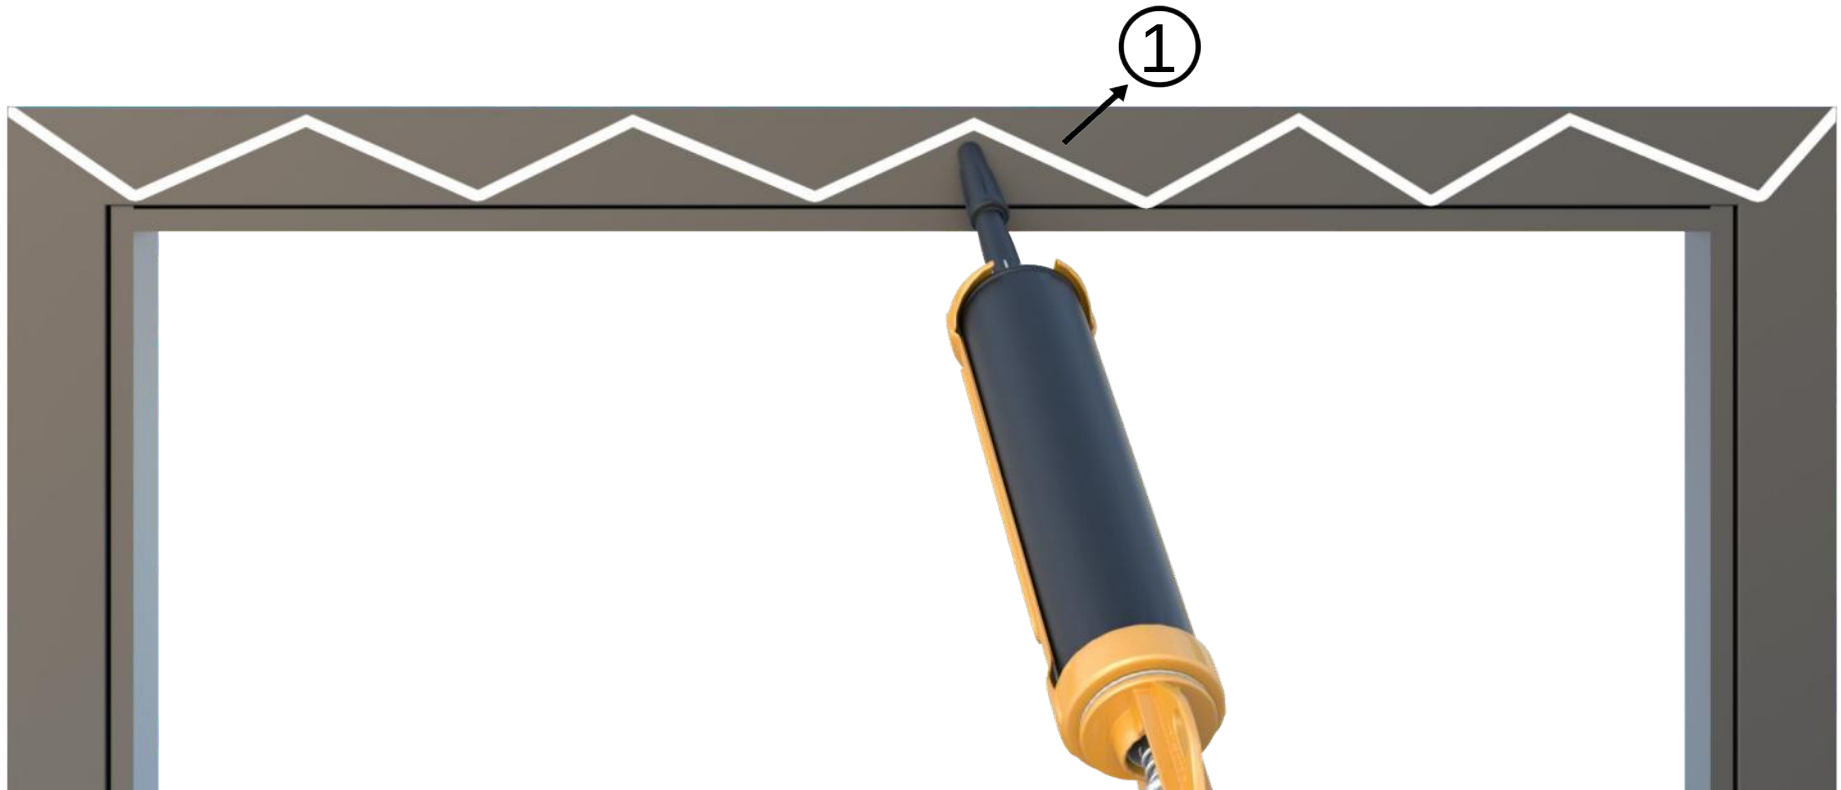


3. Drive nails through the top of the door frame to secure the square tube.

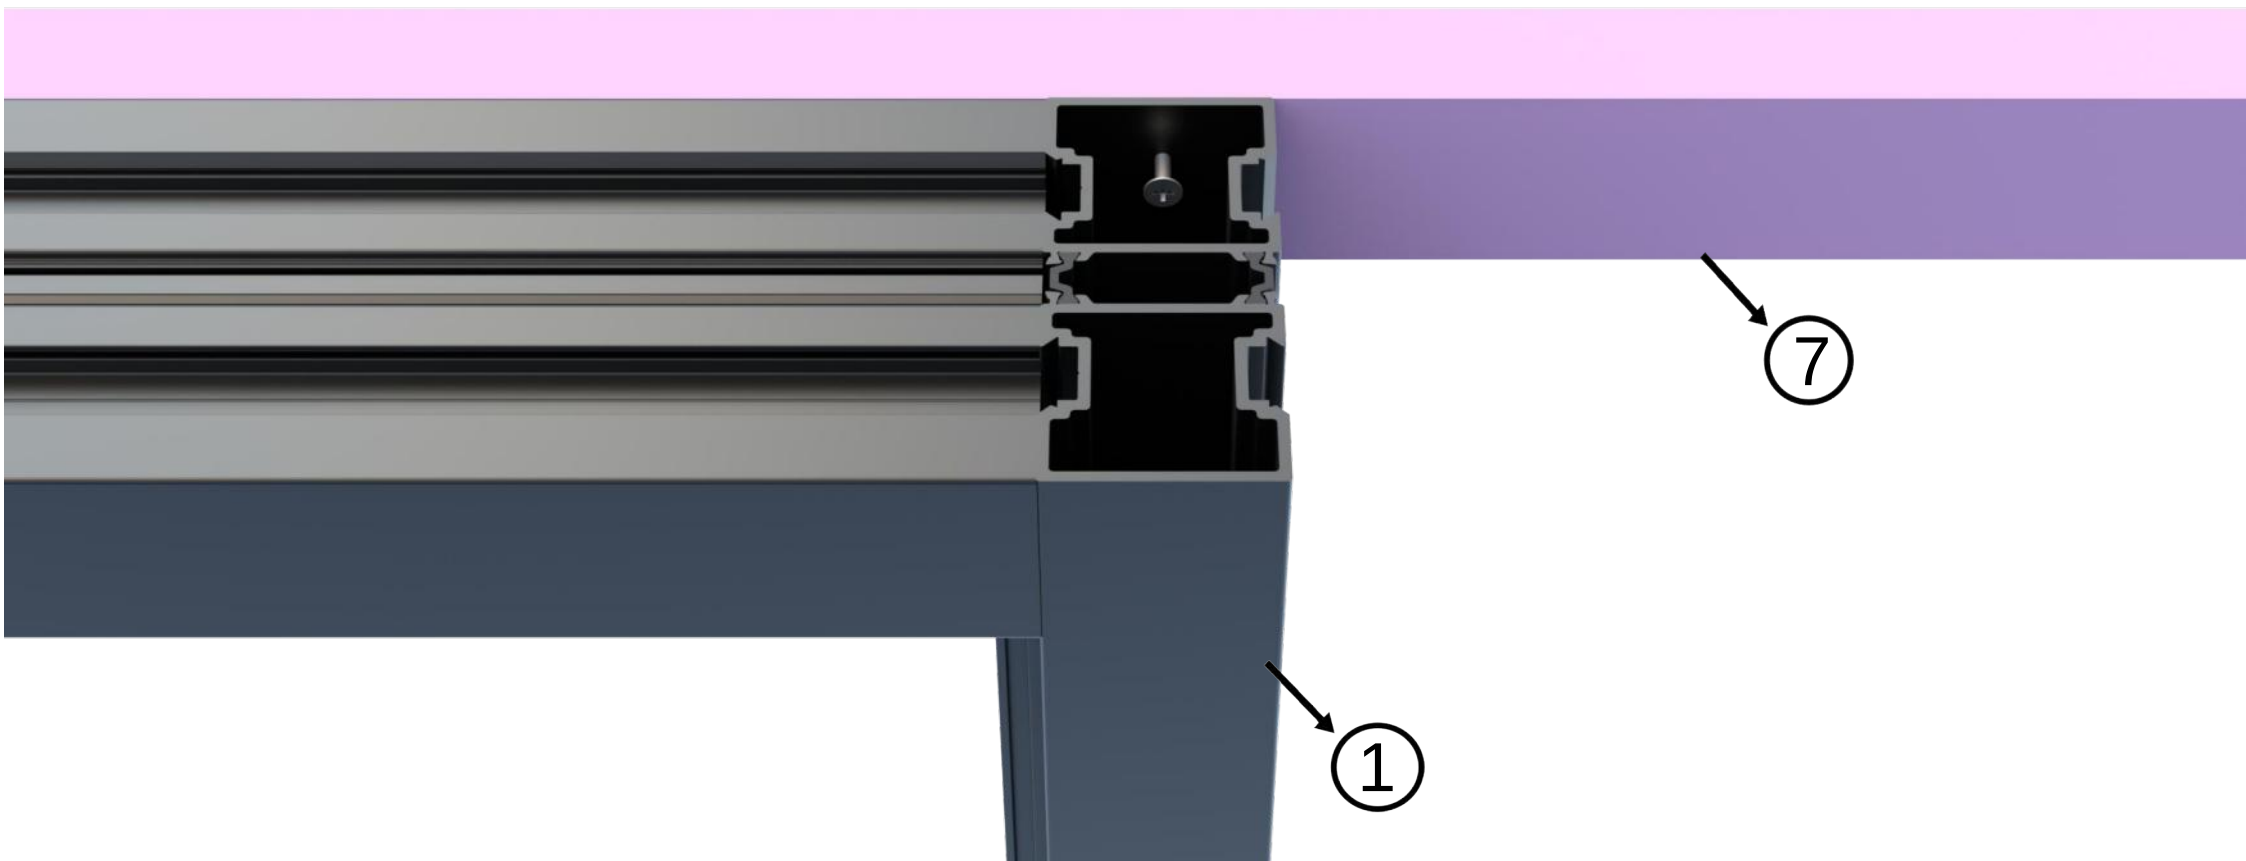


4. Install the operating leaf.

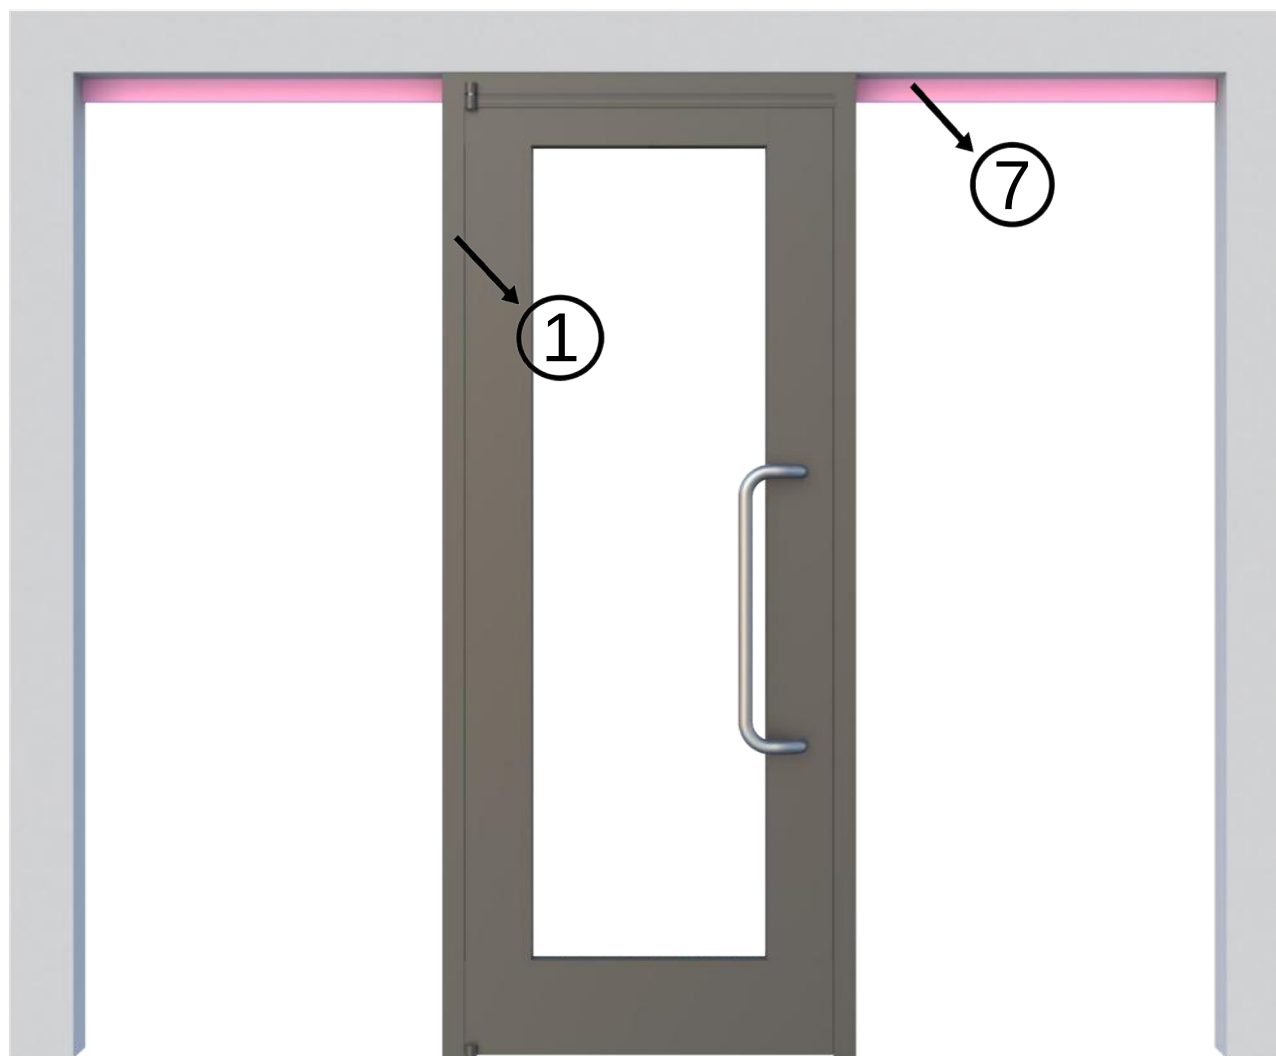


5. Start by driving one screw at the top left corner of the operating leaf to secure it.

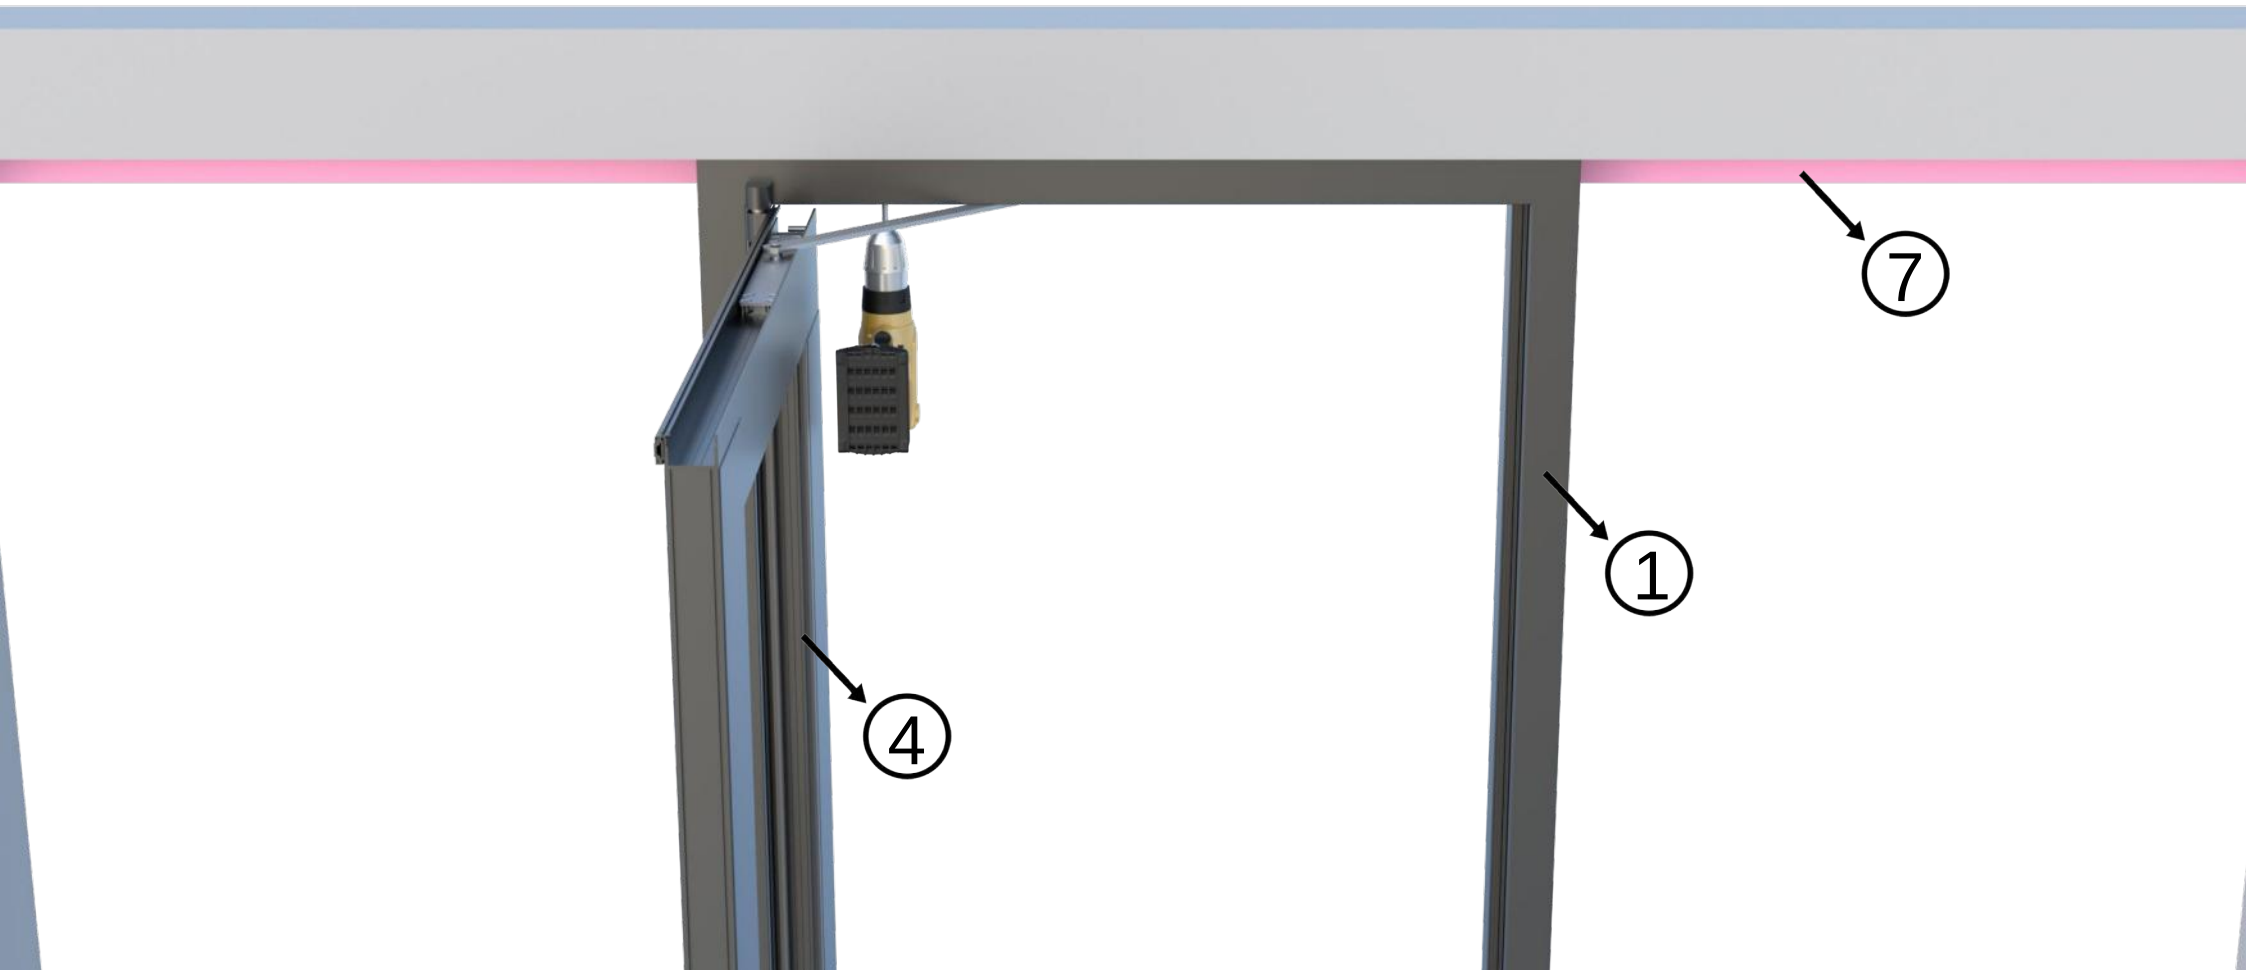


6.Ensure the operating leaf is plumb and level.

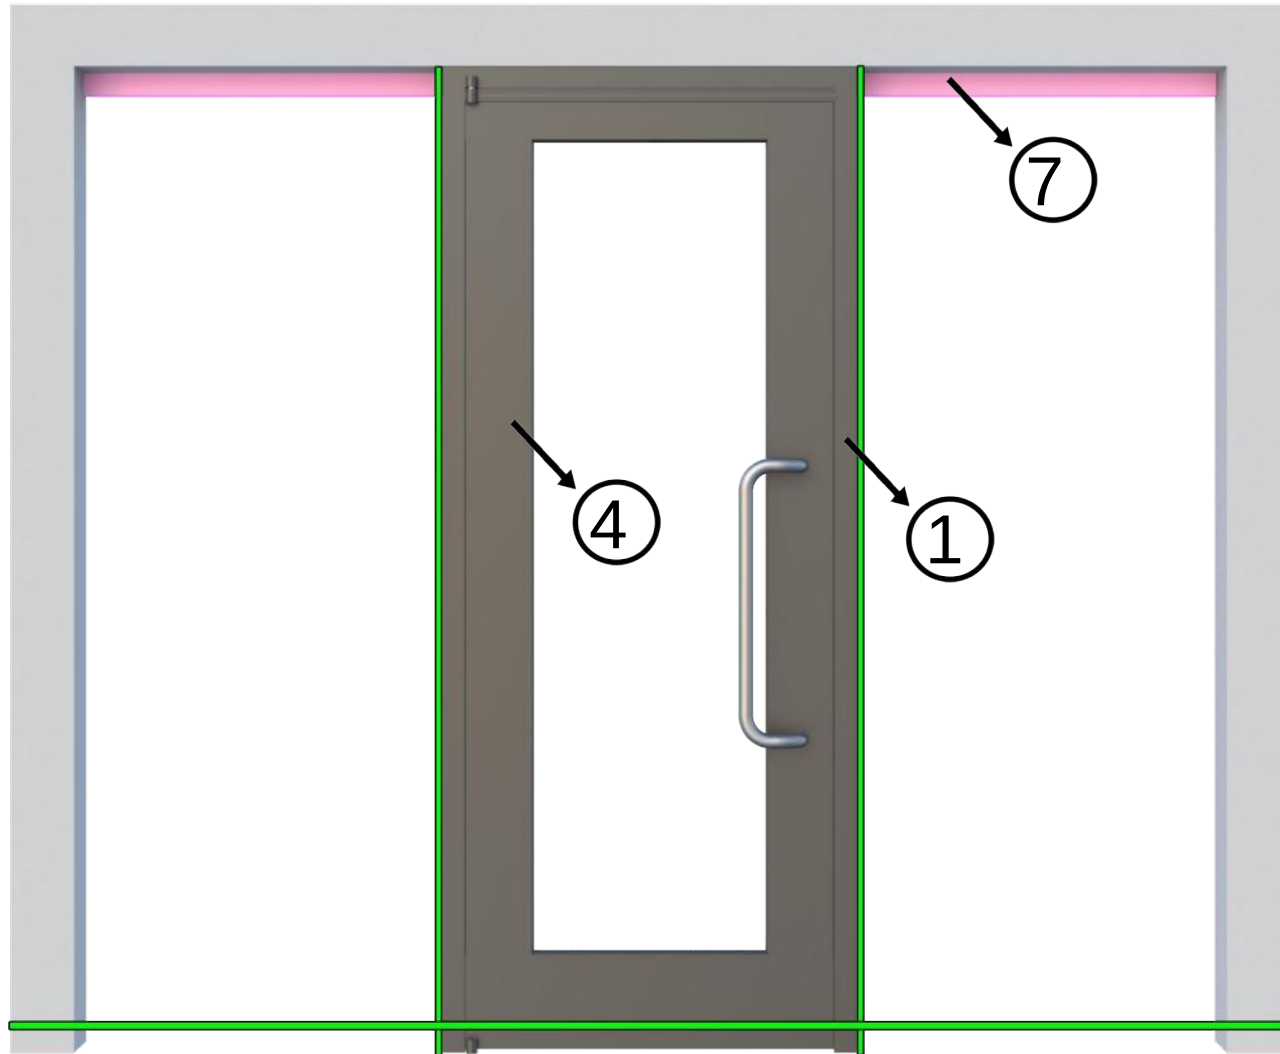


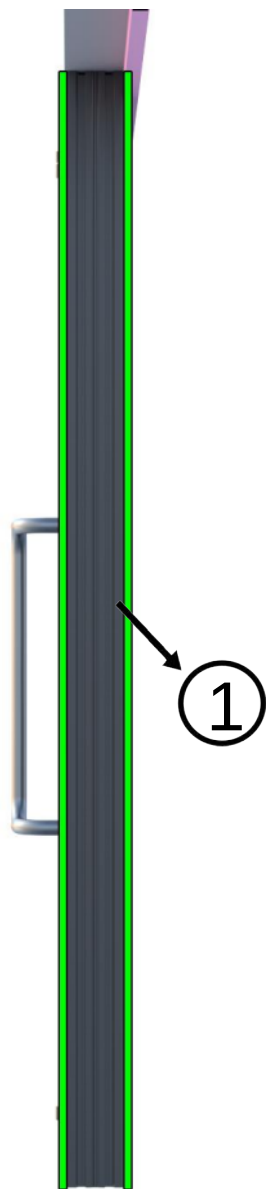

7. Once level, drive another screw at the top right corner of the operating leaf.

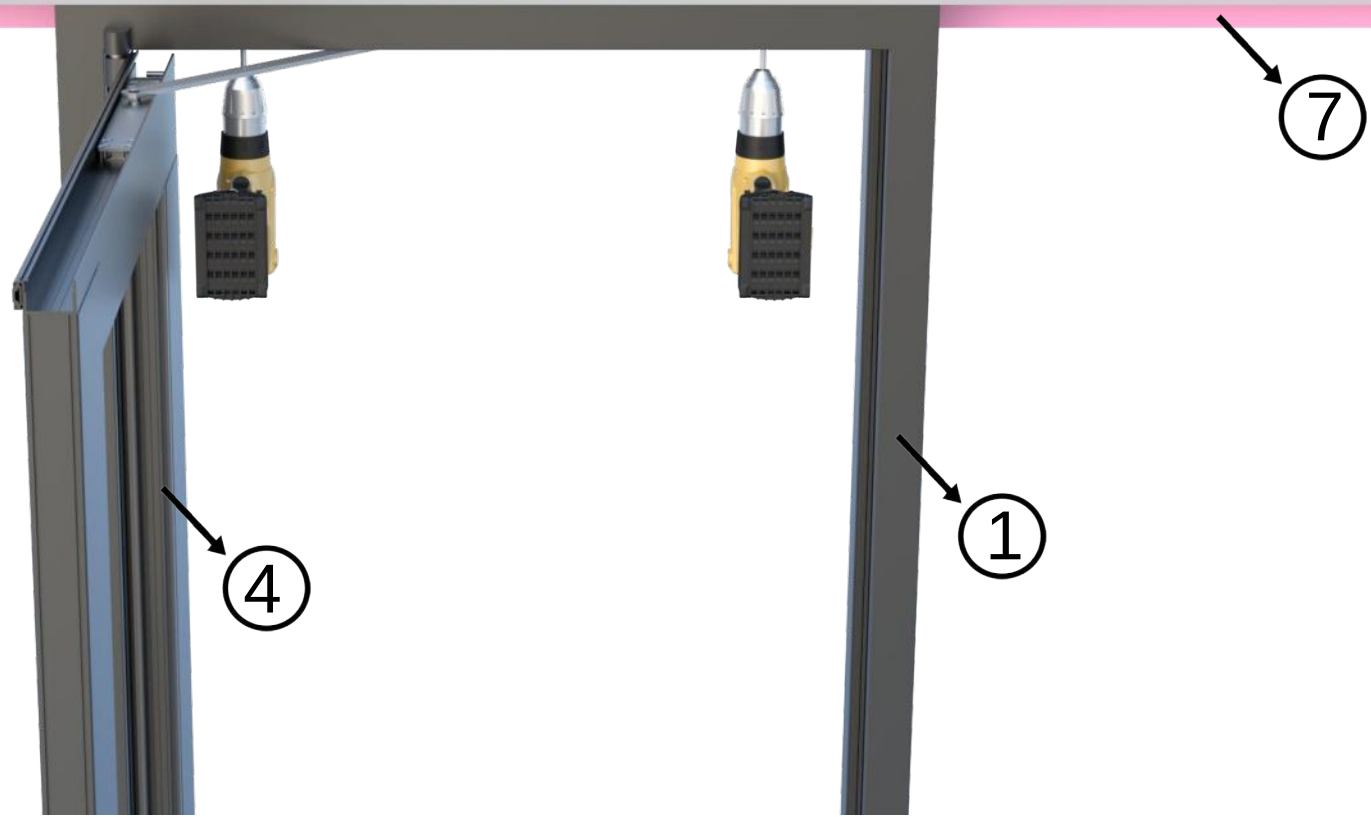

8. Install the threshold.

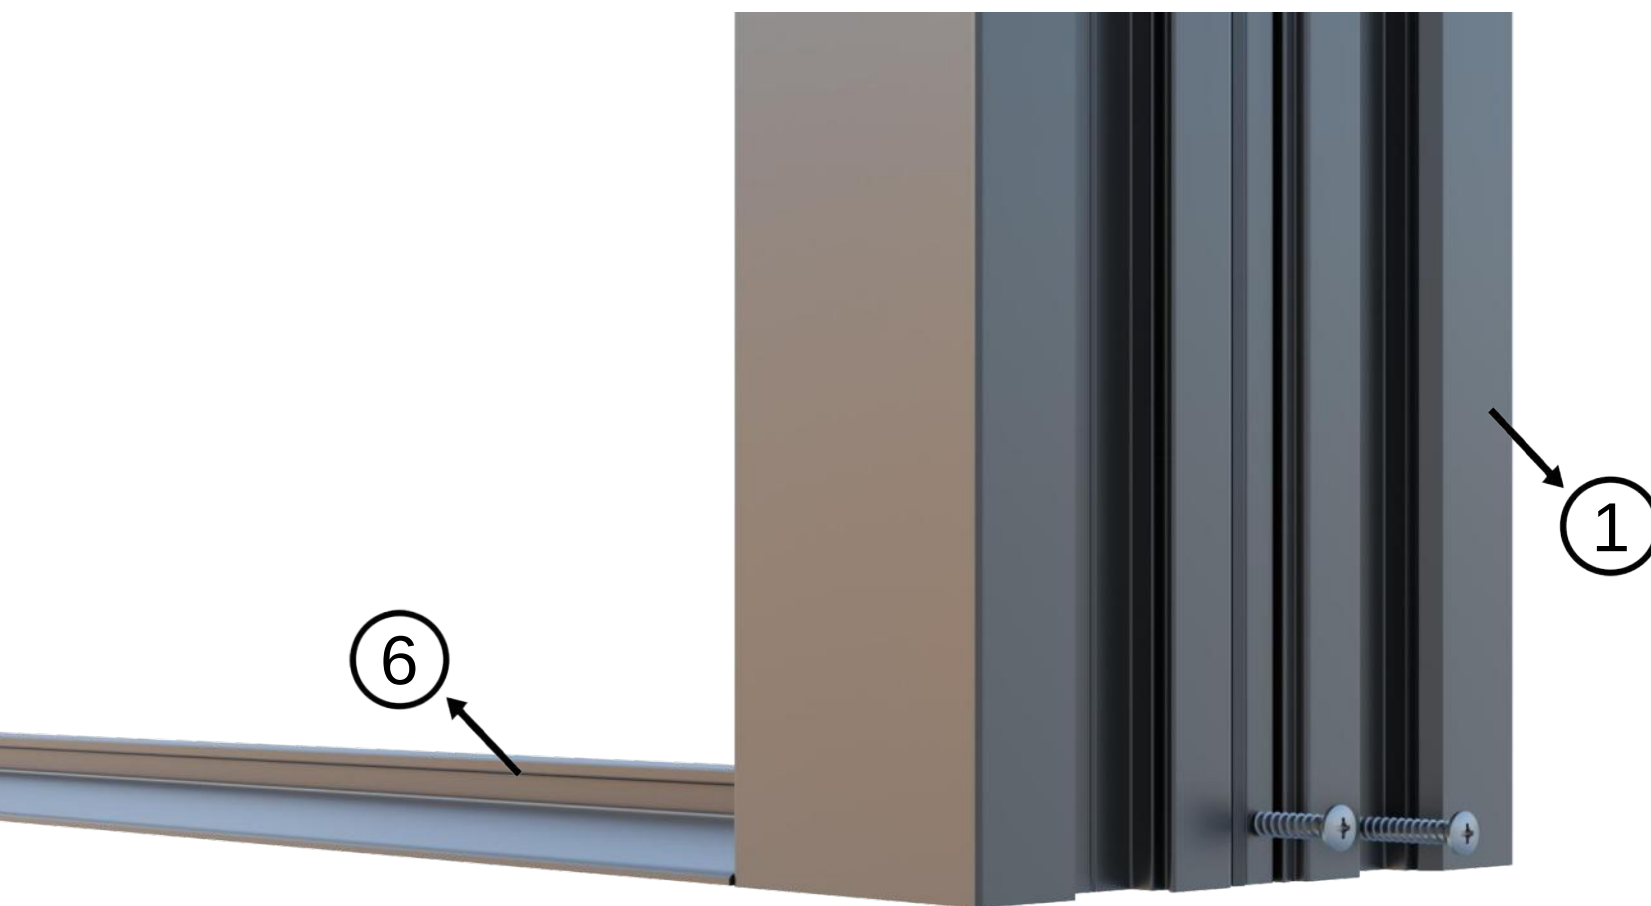

9. Install the bottom pivot socket of the pivot hinge.




10. After installing the operating leaf, be sure to tighten the nut at the top of the leaf to prevent the top and bottom pivot bolts from coming loose.




Note: To remove the leaf, first loosen the top nut, then detach the pivot bolts. (Not required for this installation.)




11. Secure the square tube to the side of the fixed leaf from the interior side. Apply silicone sealant to the surface where the square tube meets the frame.

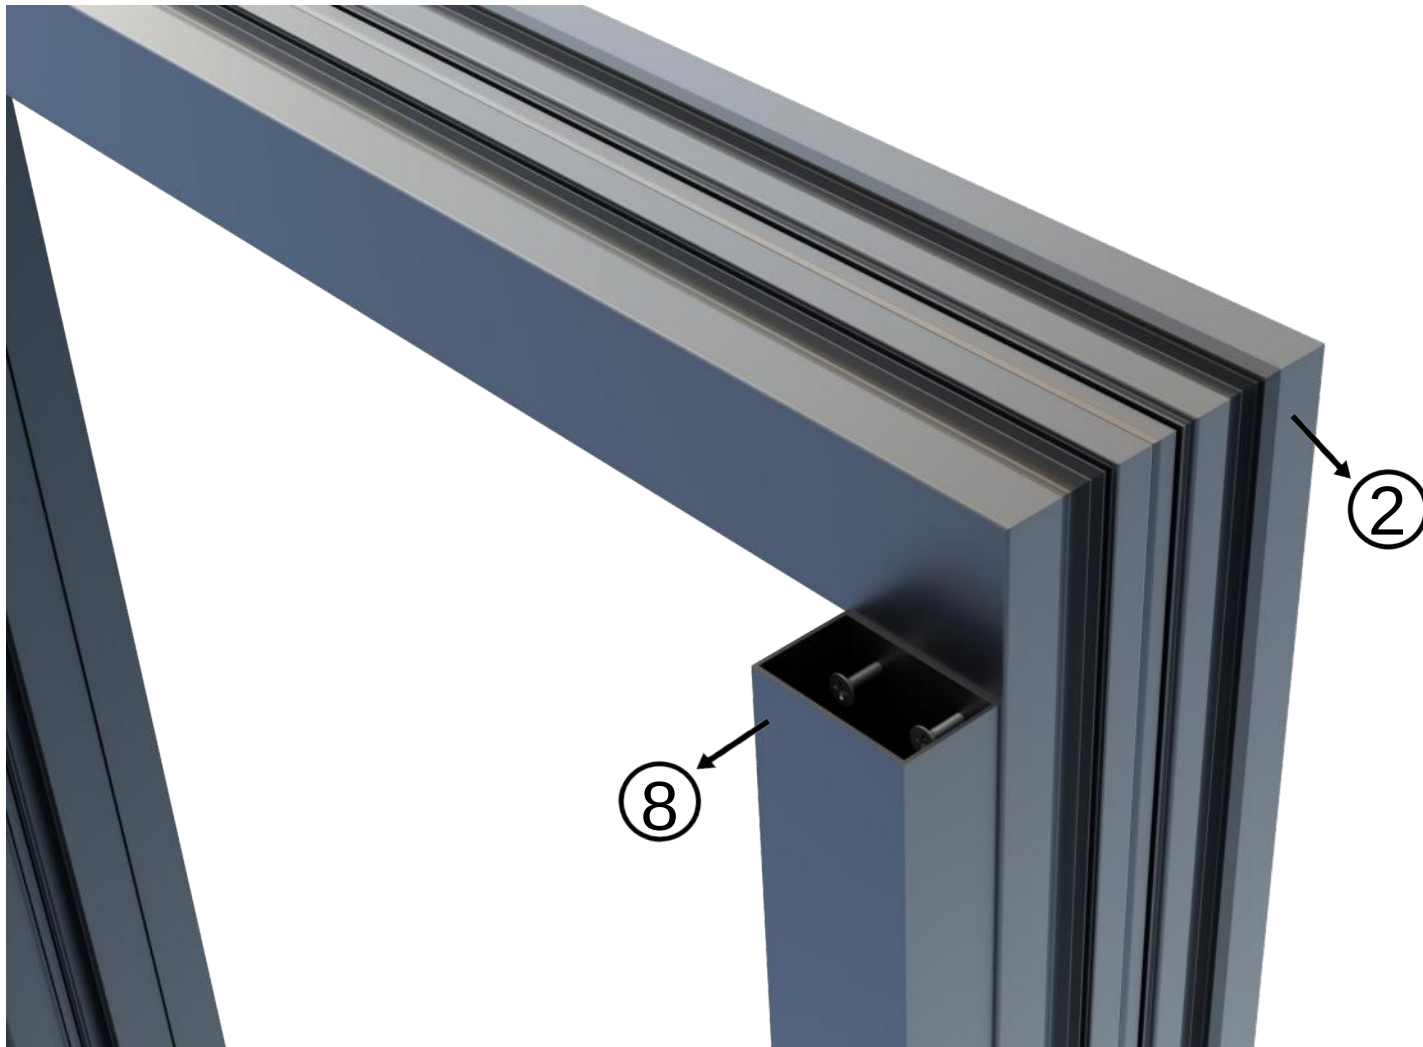


12. Apply silicone sealant to the surface of the square tube.

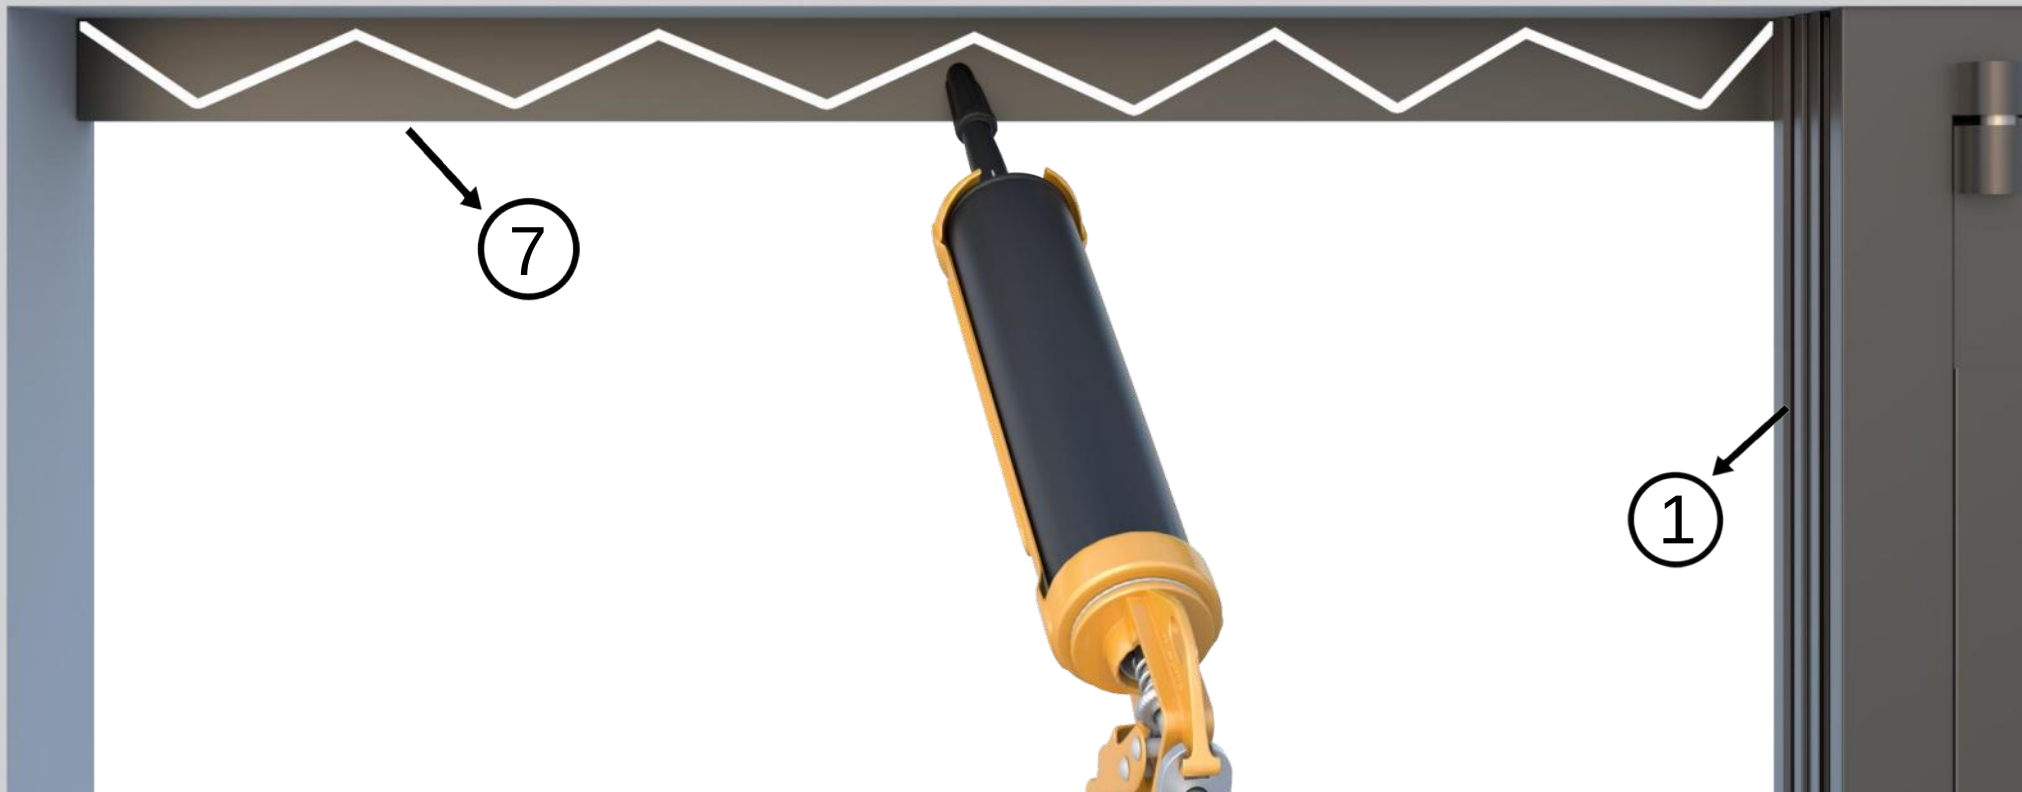


13. Install the T-shaped connecting plate at the joint between the fixed panel and the outward-opening panel. Cut the T-shaped connecting plate as needed on site.

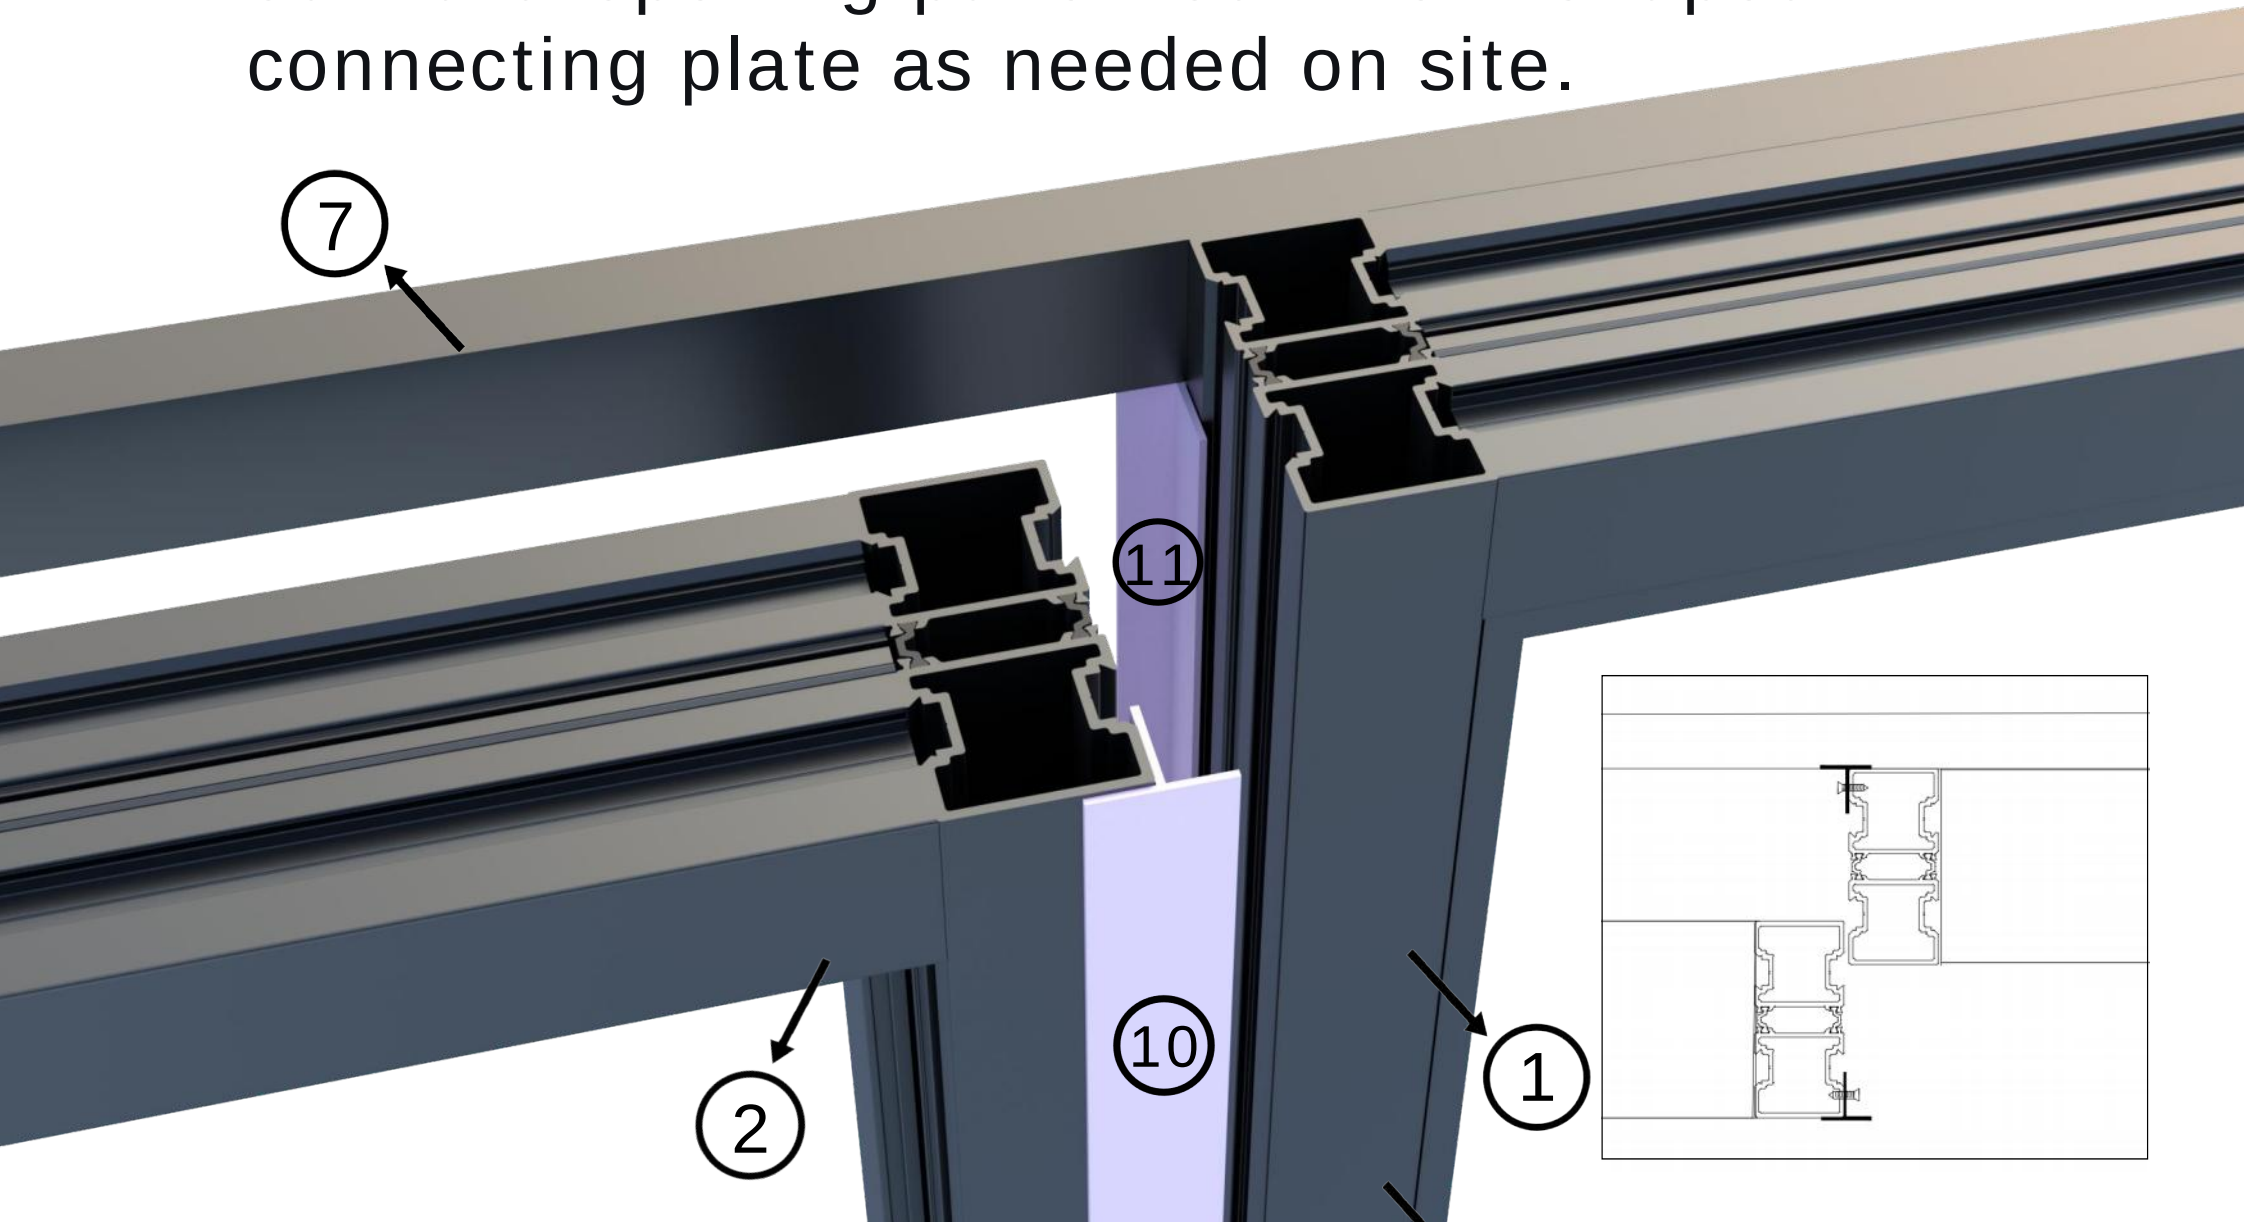


14. Install the left fixed leaf.

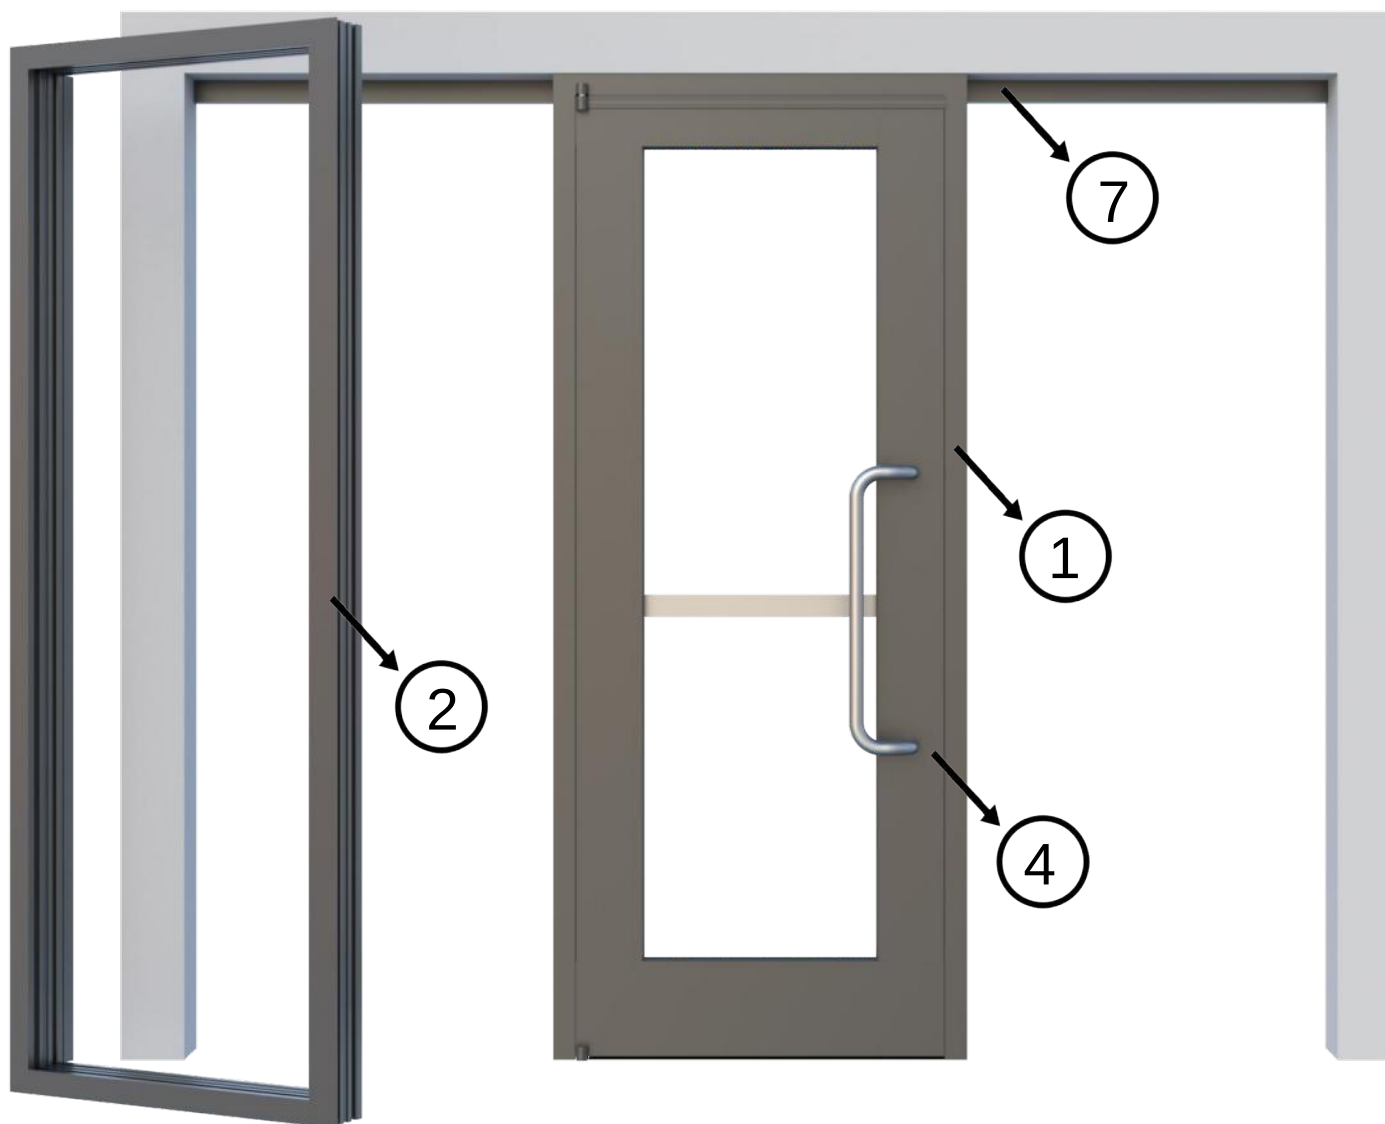


15. From the operating leaf side, drive screws to secure the fixed leaf, then install the decorative covers.

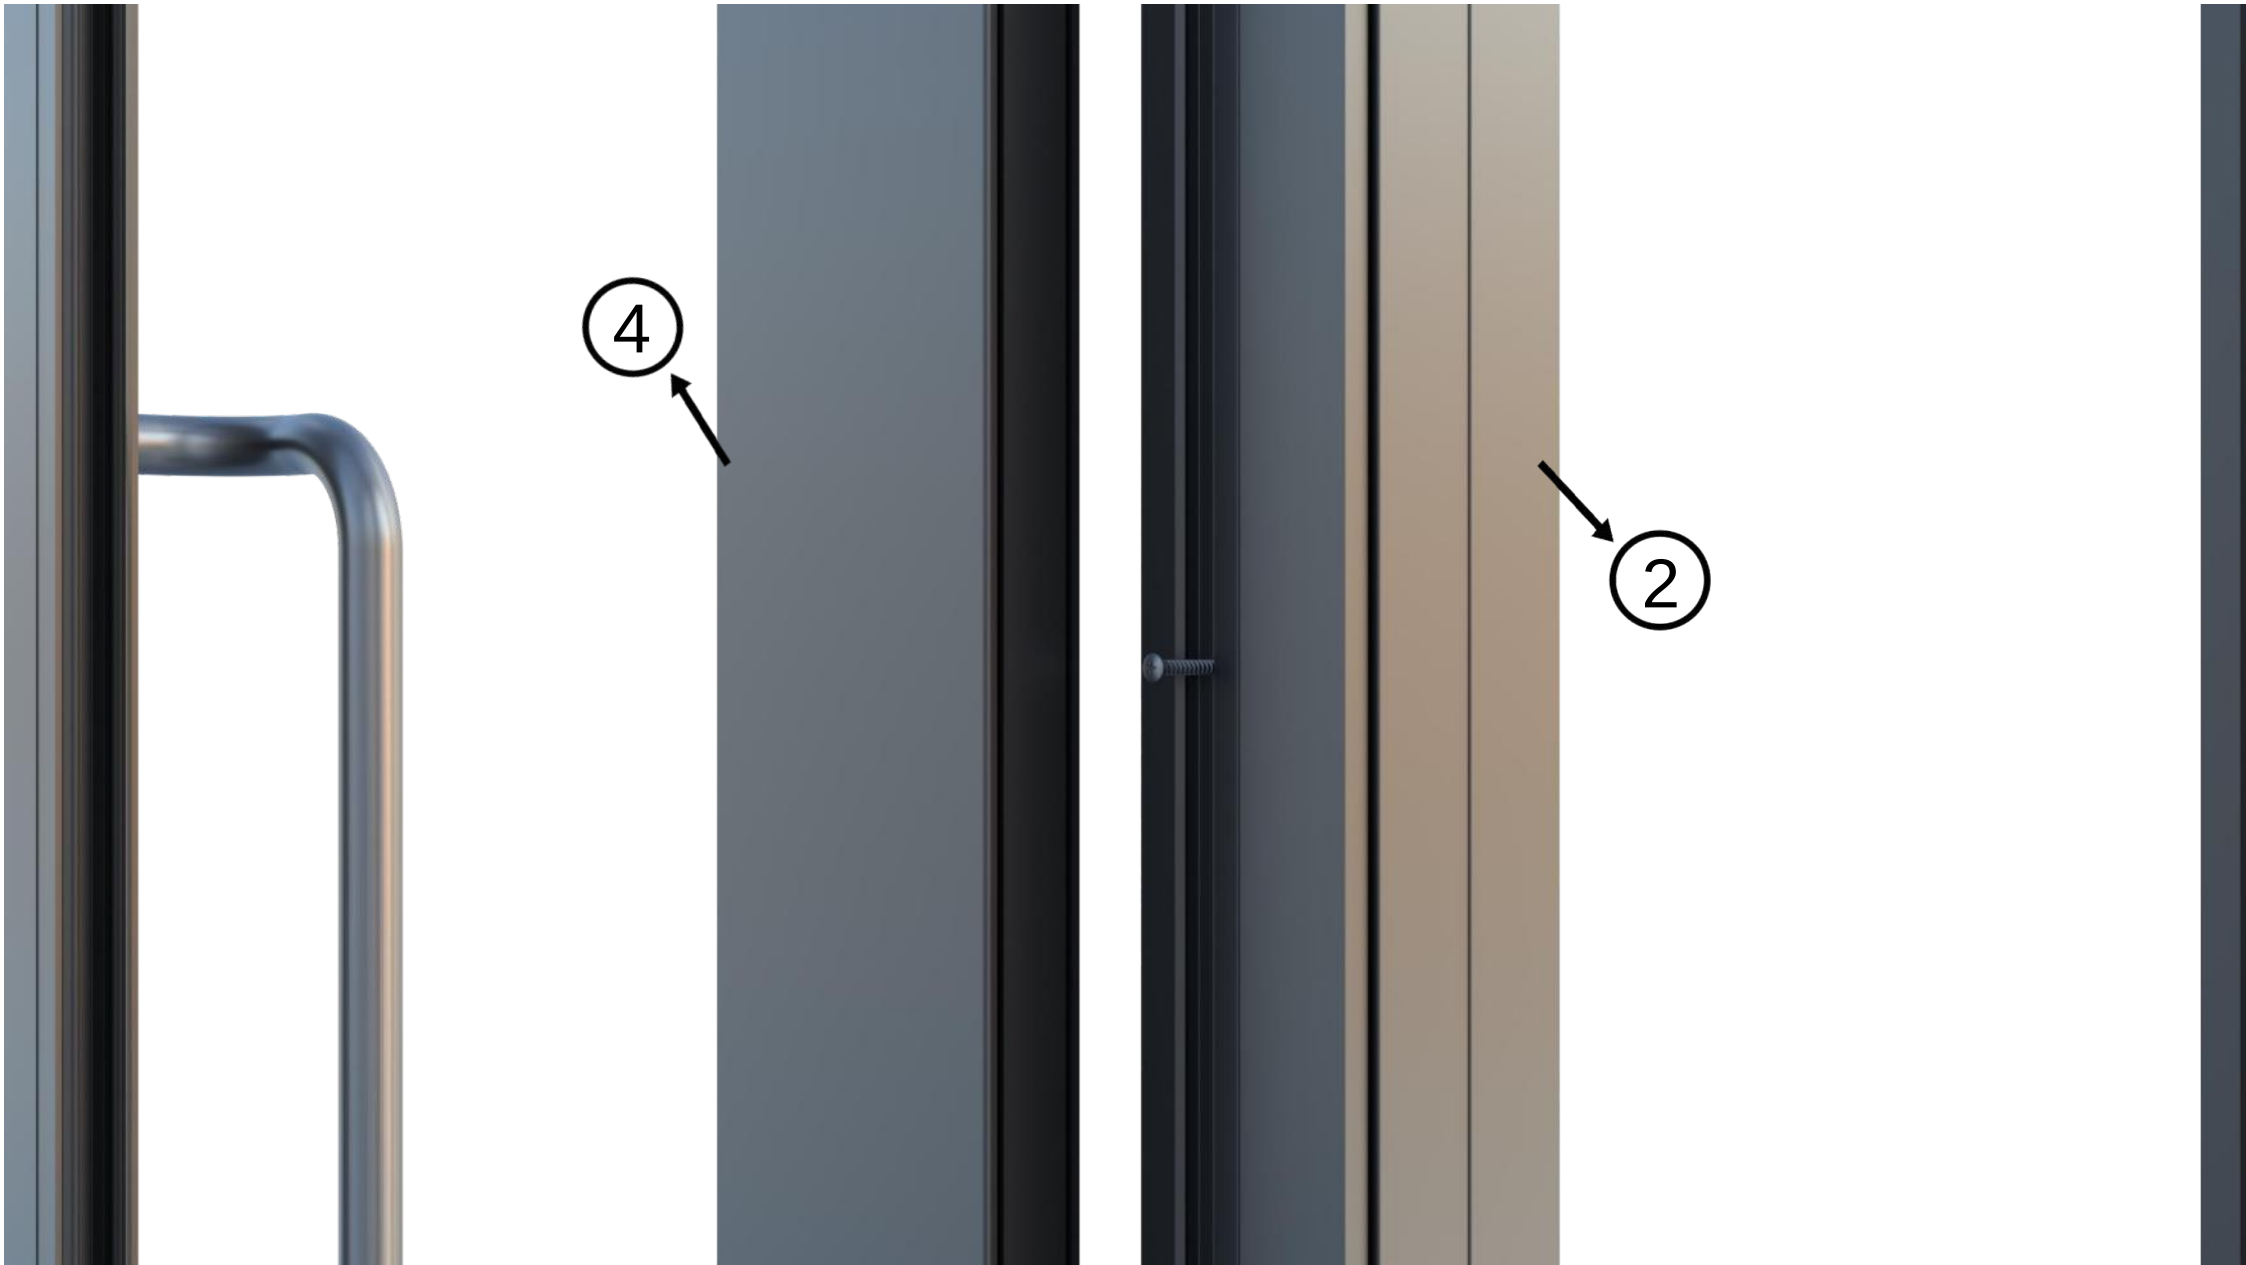


The locations of the screws and decorative covers are shown below.

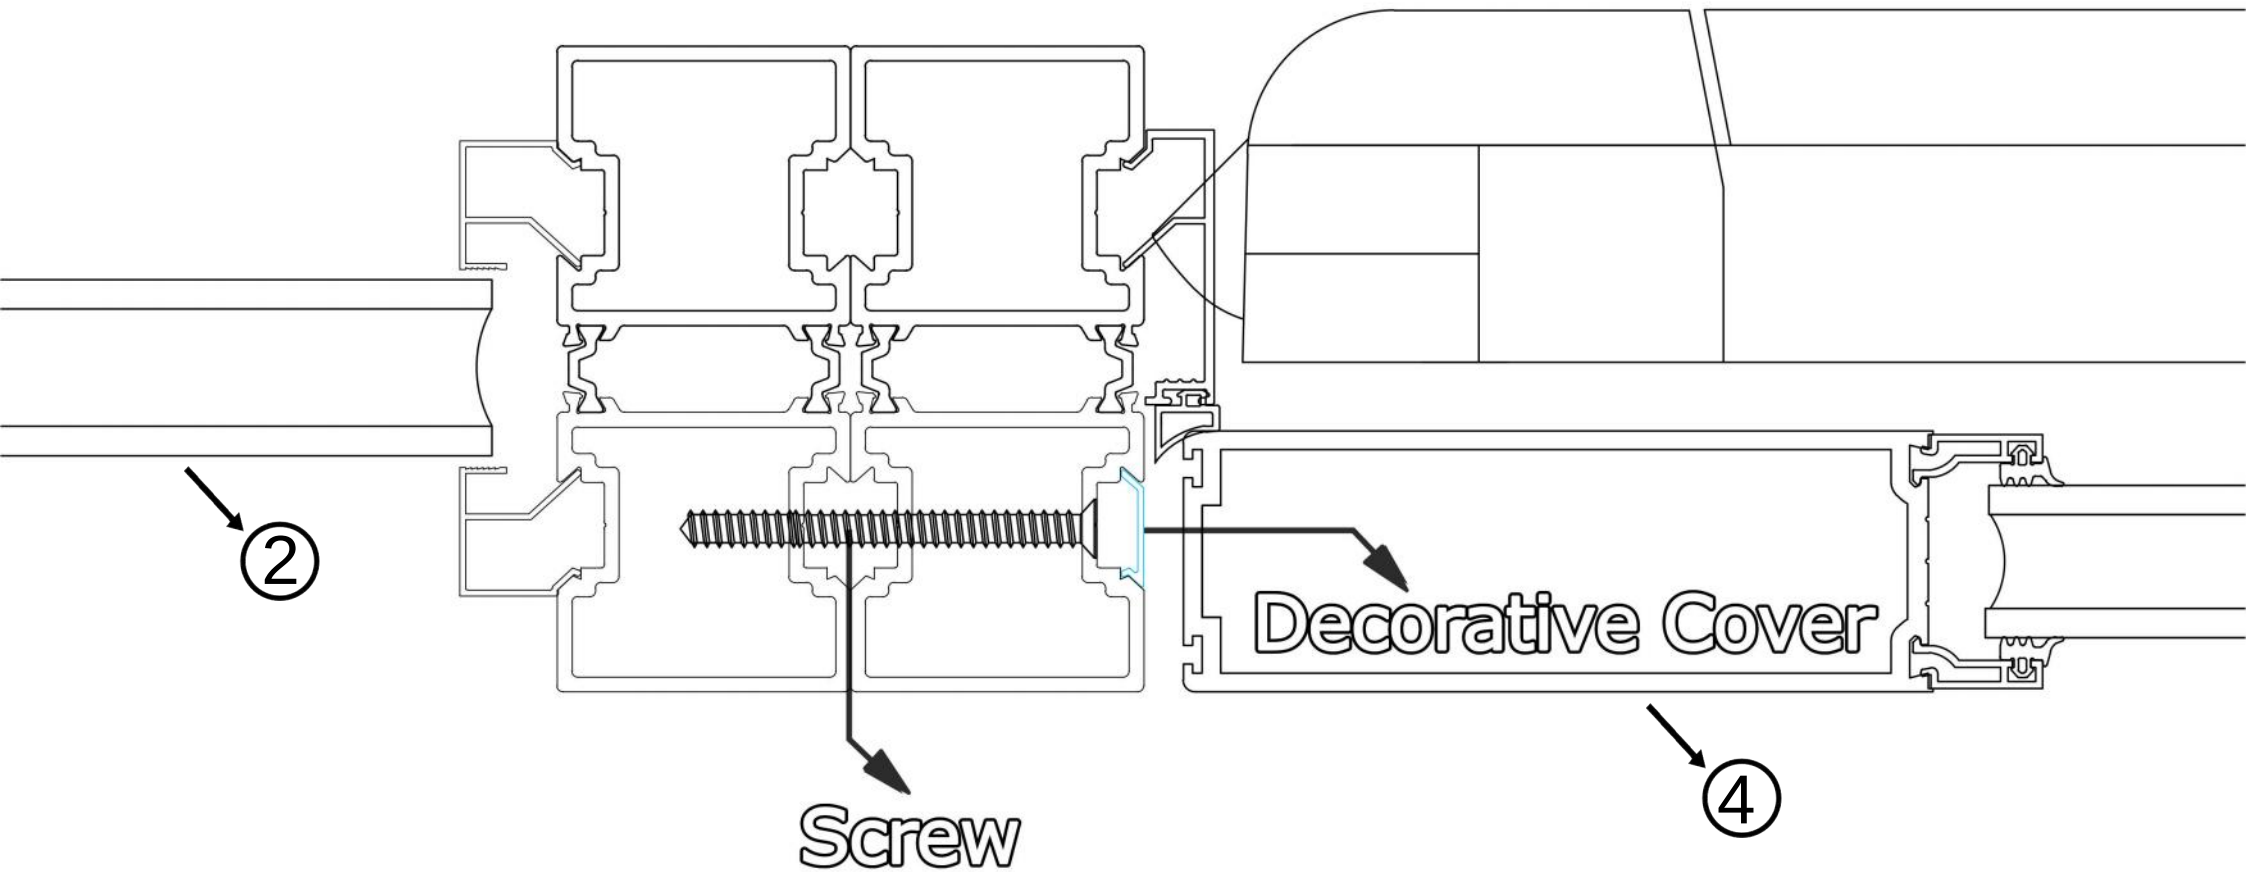

16. Remove the weatherstripping from the top frame and the wall-side side frame of the fixed leaf on the interior side.

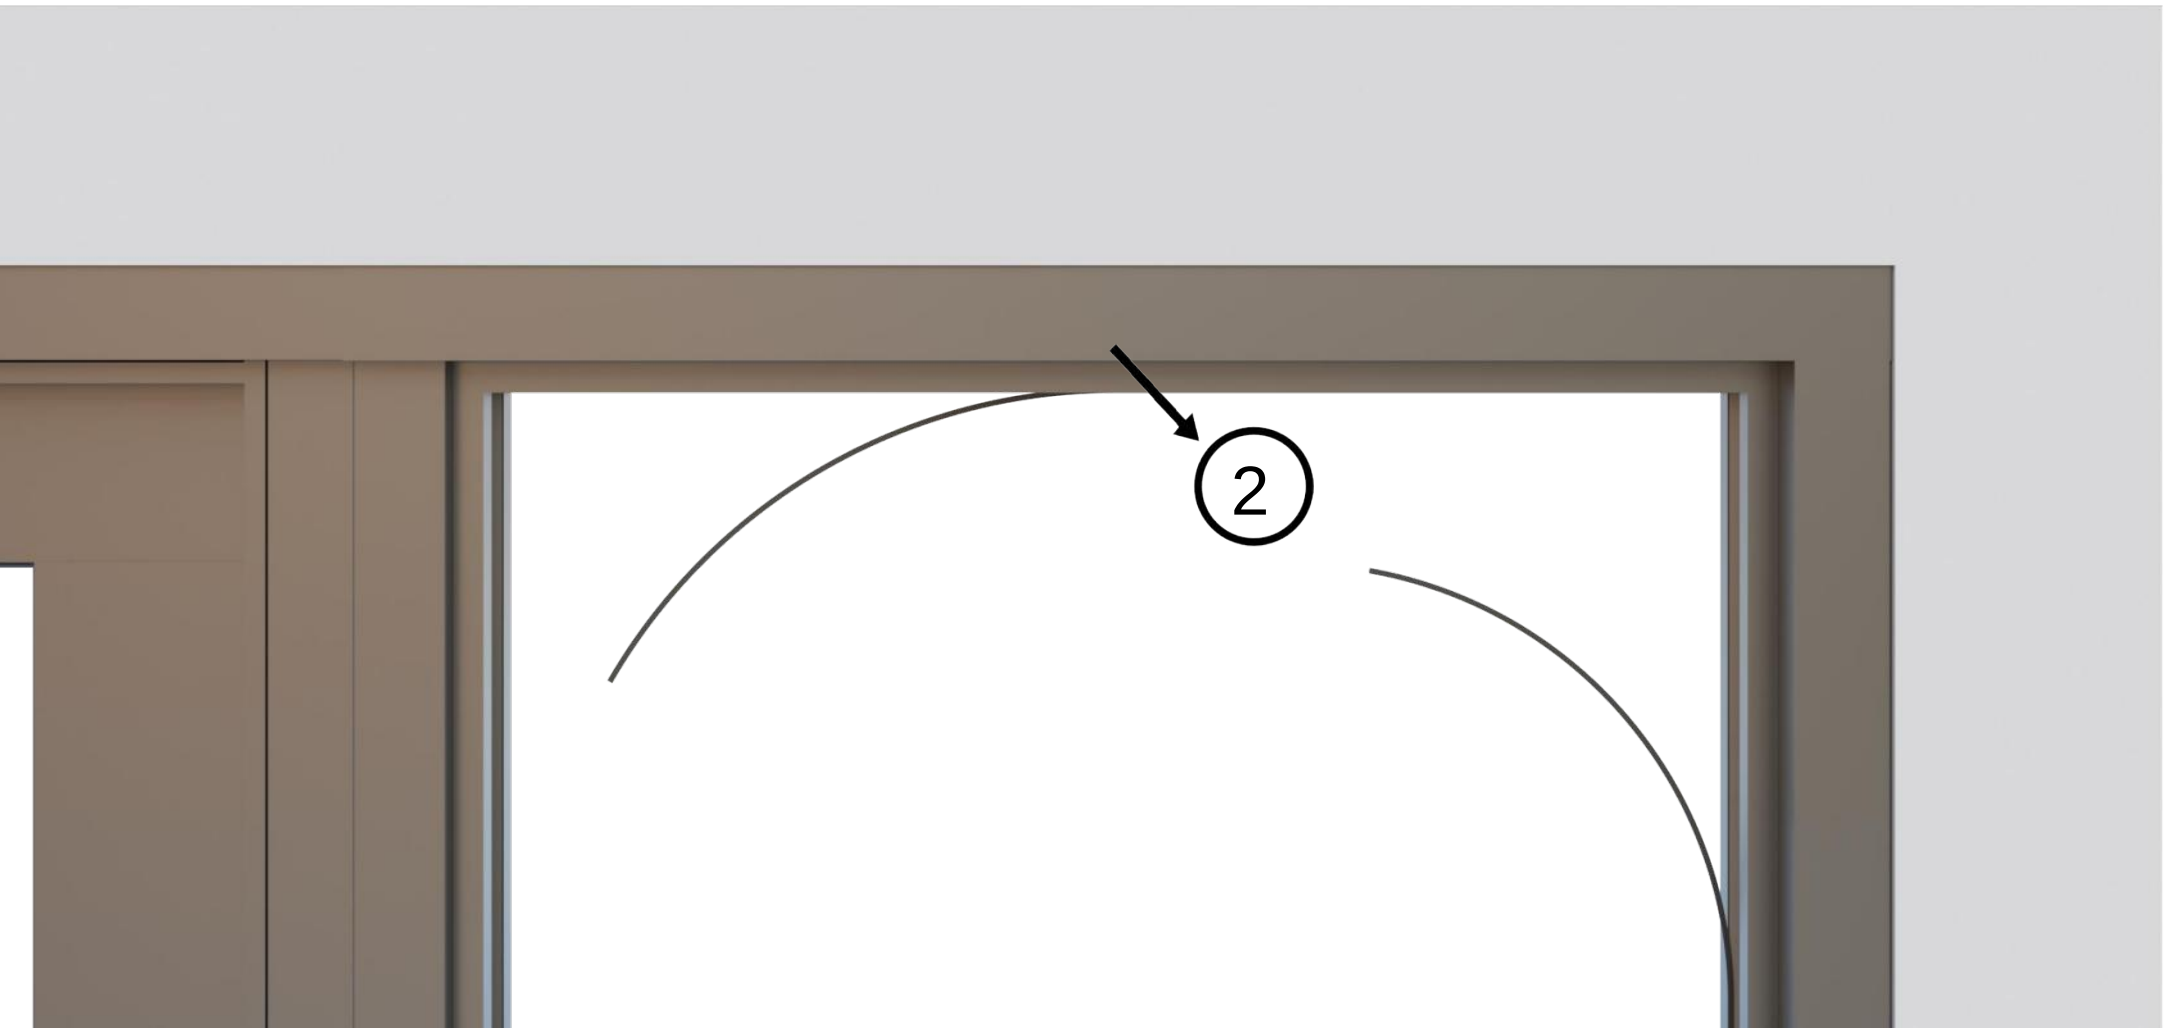


17. Remove the beads corresponding to the weatherstripping removed in the previous step.

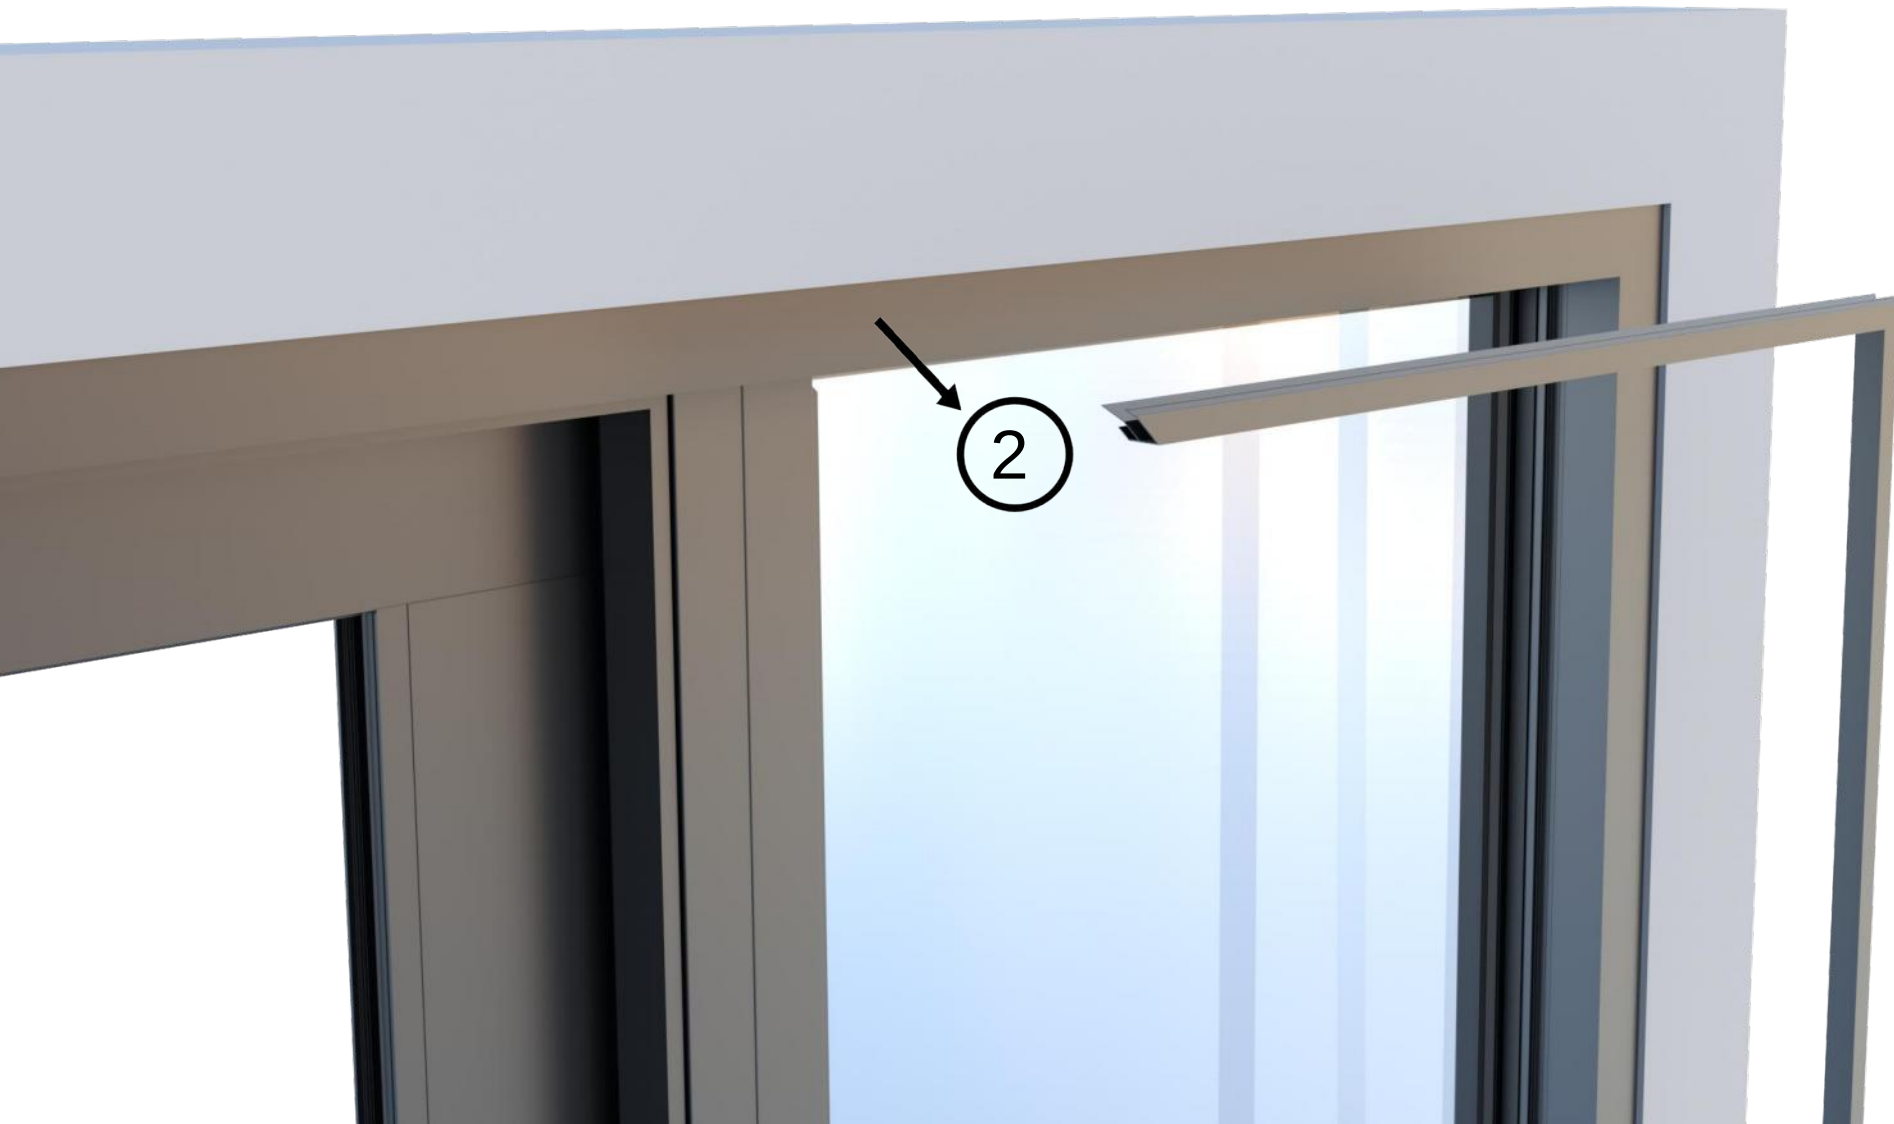


18. Drive screws to secure it in the areas where the beads were removed.




19.Reinstall the beads onto the fixed leaf.

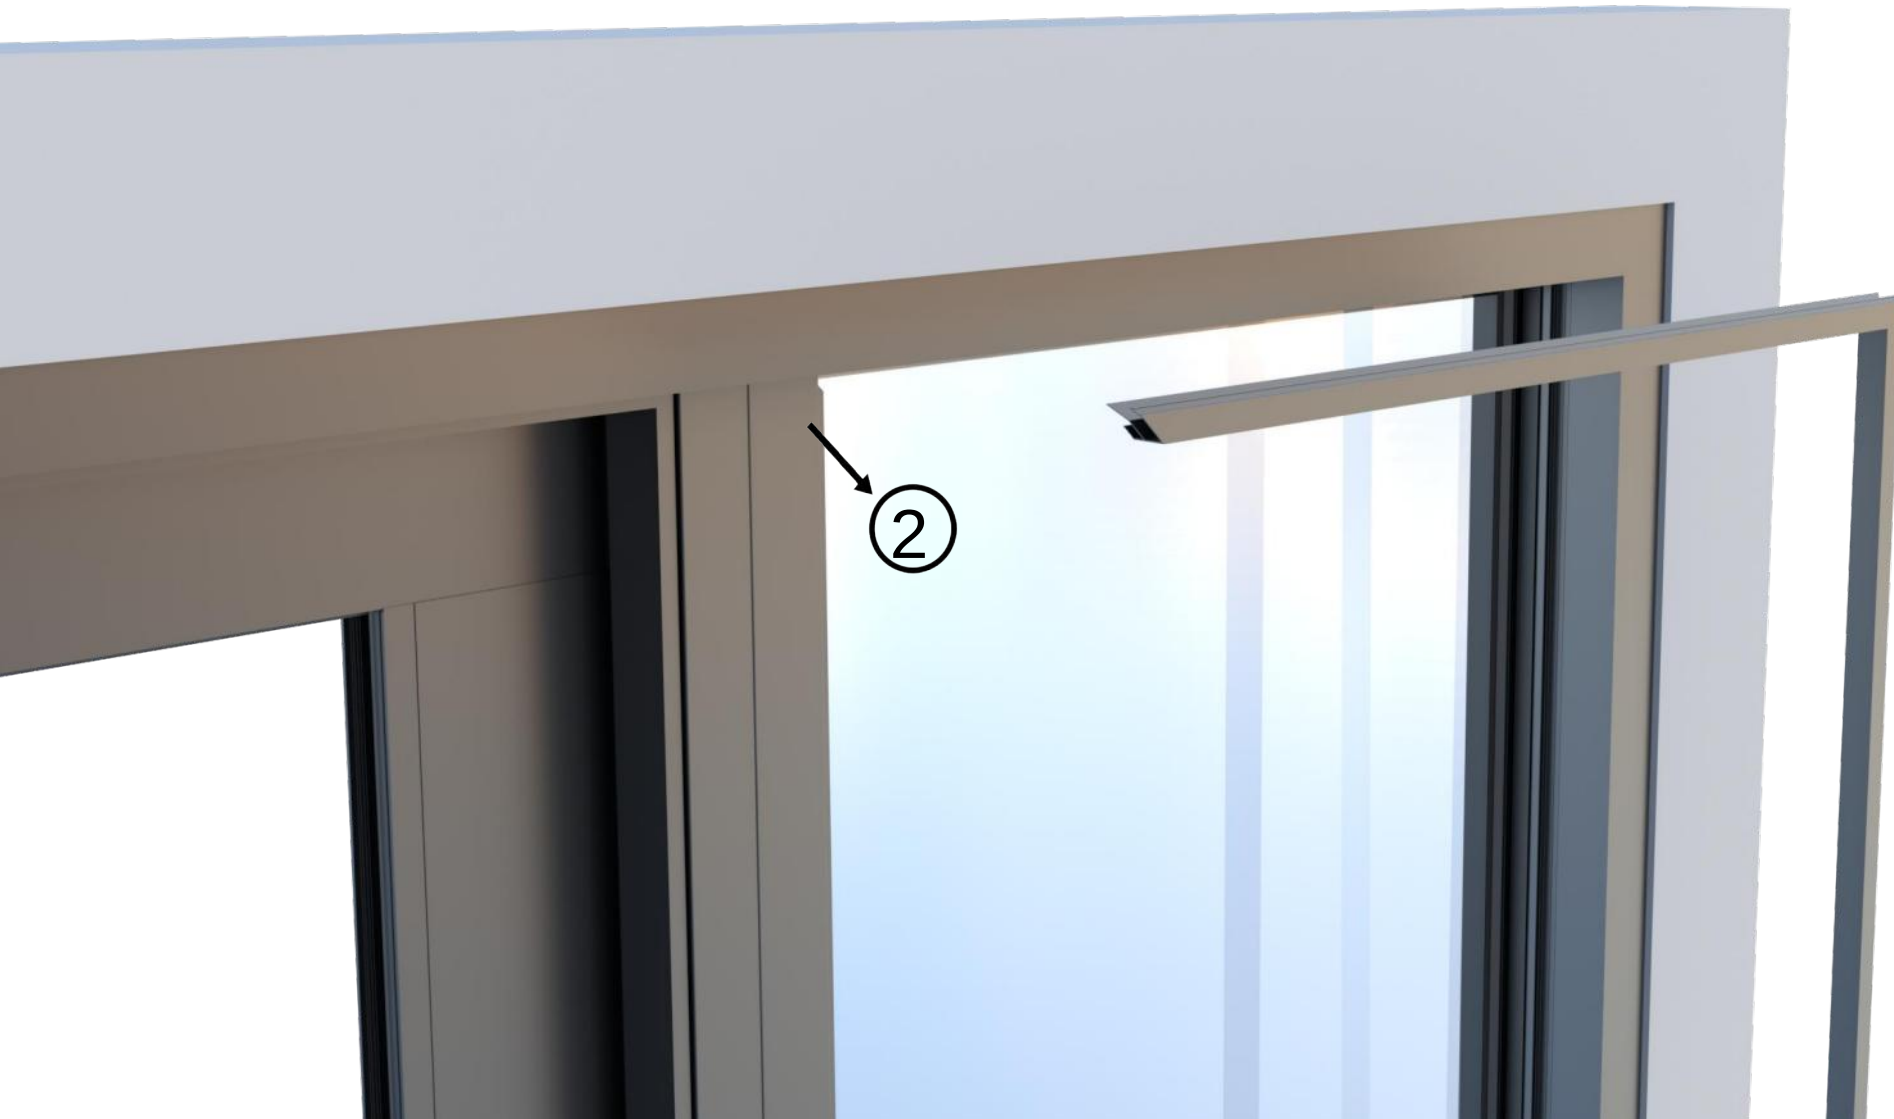

20.Reinstall the weatherstripping in place.

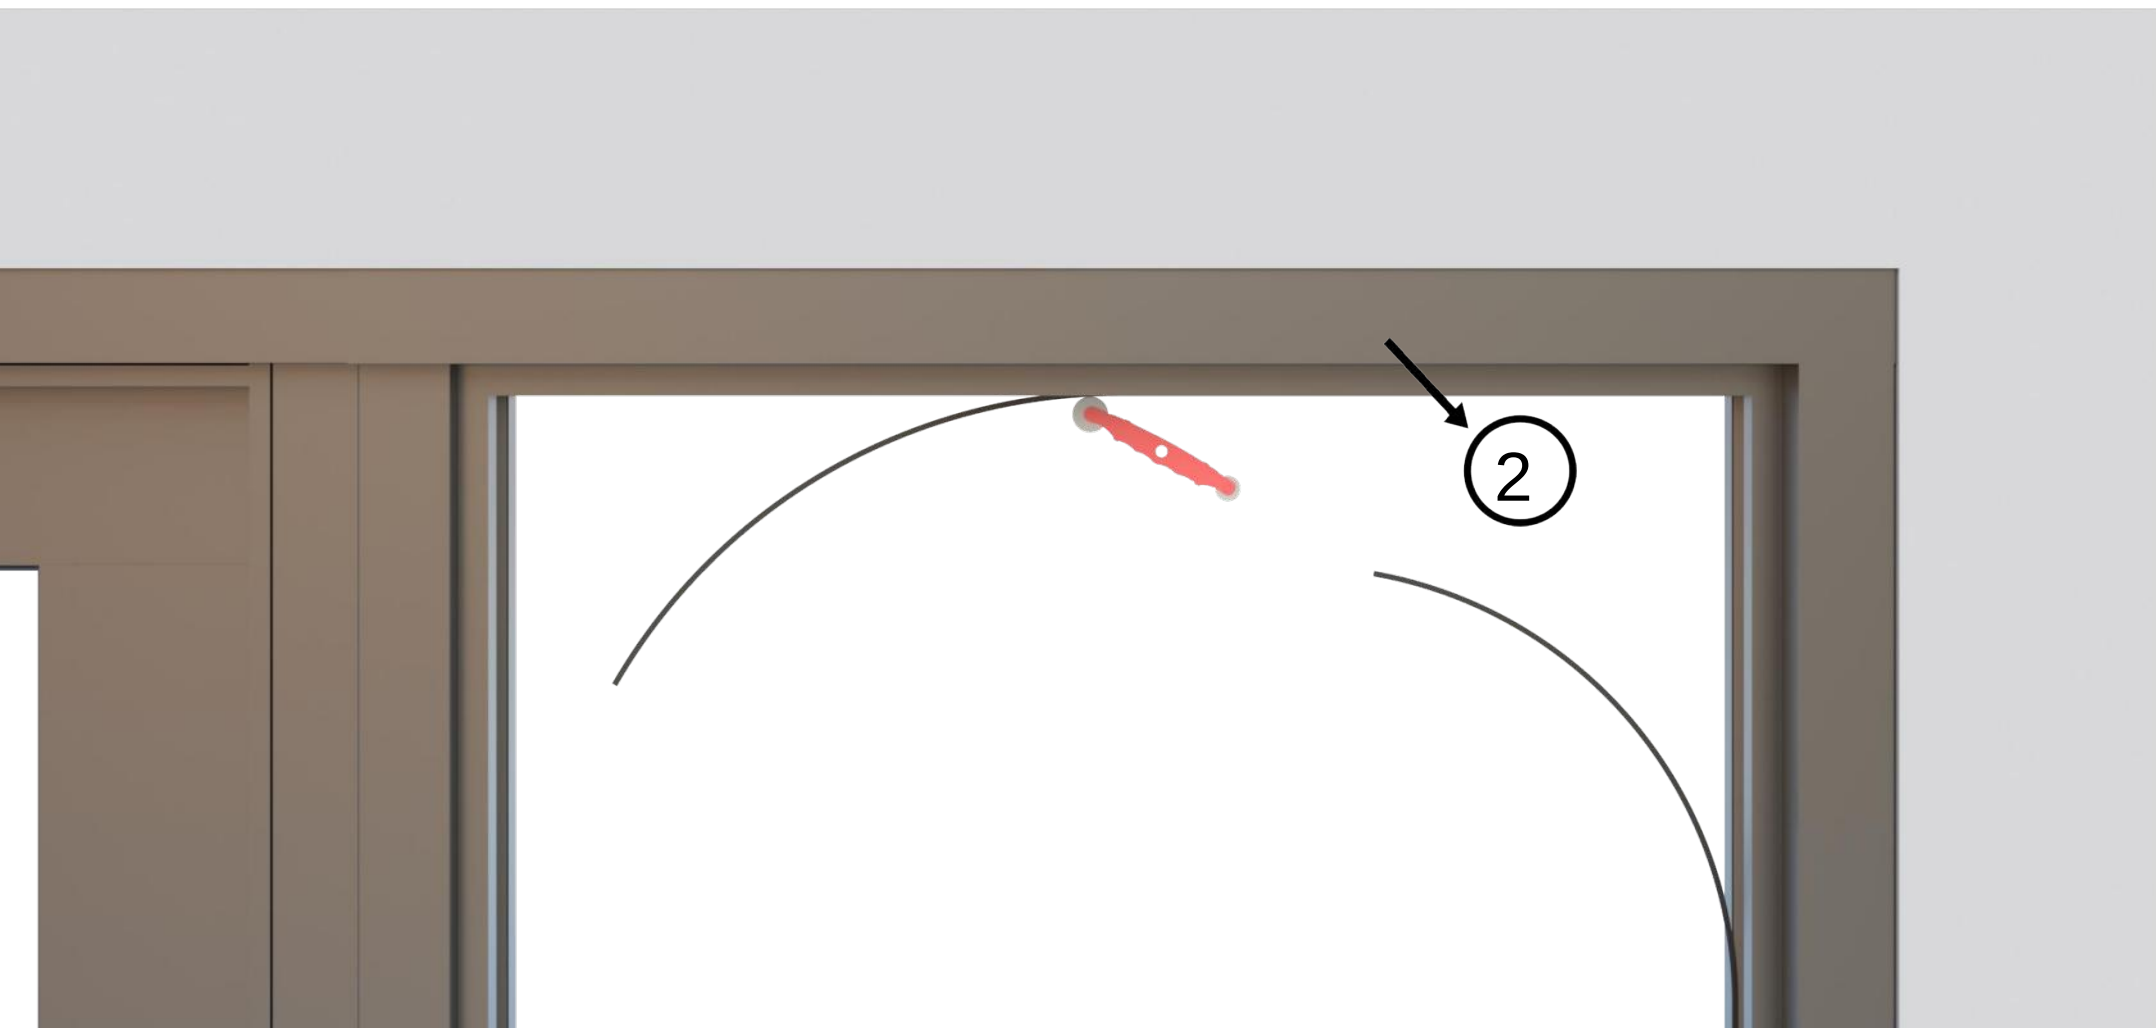

21. Install the fixed leaf on the other side using the same method.

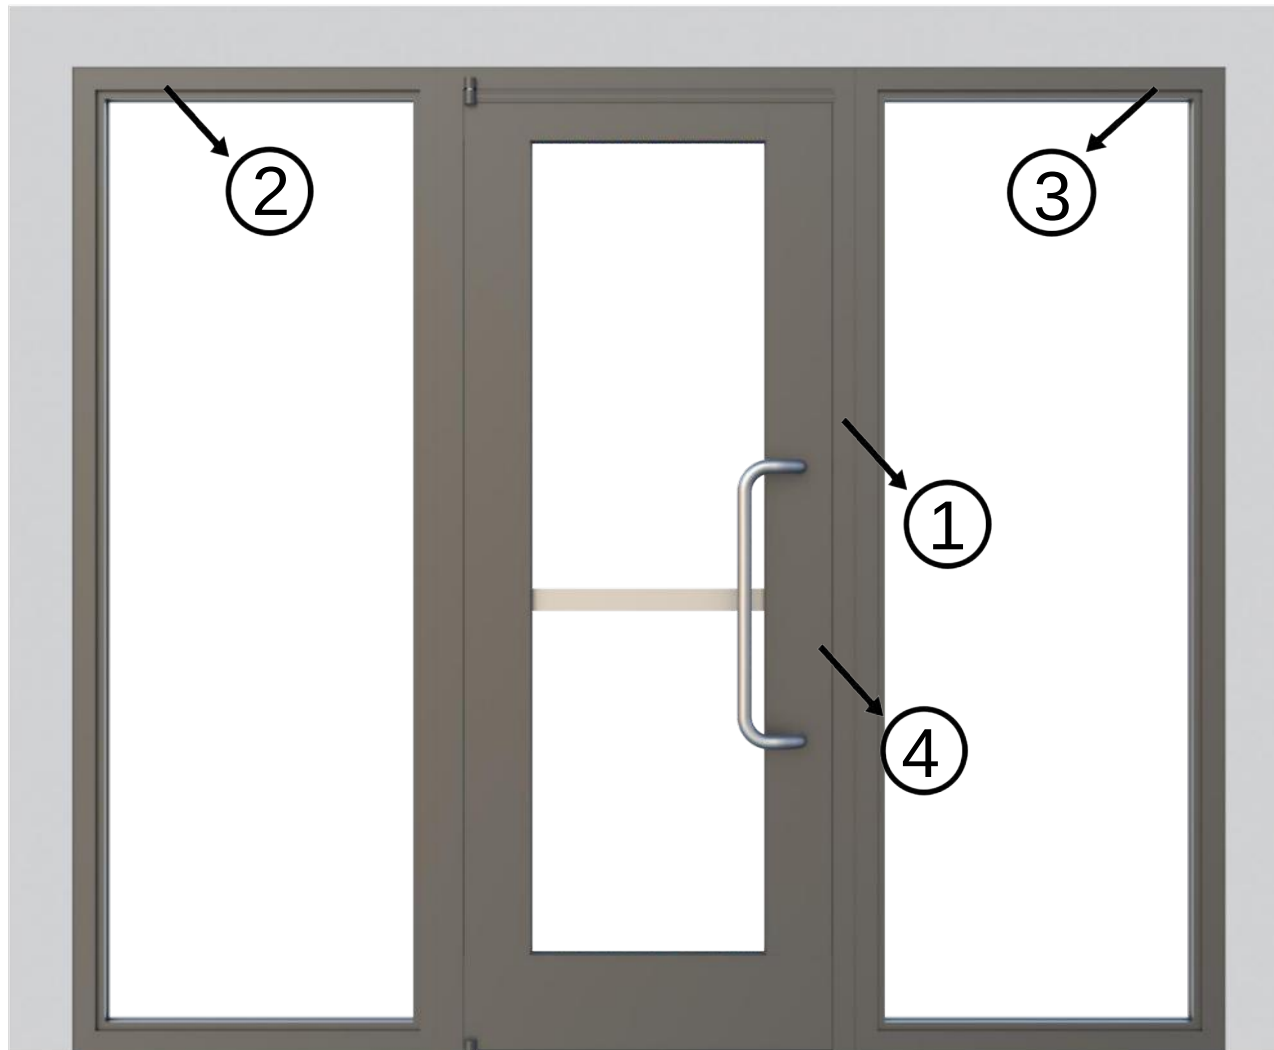

Alternatively, the square tube can be installed without nails. After installing all doors following the steps, apply glue to the door frame and bond the square tube in place.

